shindaiwa®

Operator's Manual T302 Grass Trimmer / Brushcutter

WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

WARNING



Read and understand all provided literature before use. Failure to do so could result in serious injury.

Note: This product complies with CAN ICES-2/NMB-2.

TABLE OF CONTENTS

| Introduction | 3 |
|---|----|
| Servicing Information | 4 |
| Parts and Serial Number | 4 |
| Service | 4 |
| Consumer Product Support | 4 |
| Product Registration | 4 |
| Additional Literature | |
| Safety | |
| International Symbols | 5 |
| Personal Condition and Safety Equipment | 7 |
| Equipment | 12 |
| CARB and EPA Emission Control Information | |
| Description | |
| Contents | |
| Assembly | |
| Support Handle | 17 |
| Line Installation – HDFH Models | |
| Operation | |
| Fuel | |
| Starting Cold Engine | 22 |
| Starting Warm Engine | |
| Stopping Engine | |
| Applications | |
| Operating Techniques - Nylon Line Head | |
| Operating Techniques - Metal or Plastic Blade | |
| Reaction Forces | |
| Blade Cutting Problems | |
| Maintenance | |
| Skill Levels | |
| Maintenance Intervals | |
| Air Filter | |
| Fuel Filter | |
| Spark Plug | |
| Cooling System | |
| Exhaust System | |
| Carburetor Adjustment | |
| Lubrication | |
| Nylon Line Head Disassembly Instructions | |
| Nylon Line Replacement | |
| Troubleshooting | |
| Storage | |
| Transportation | |
| Short-Term Storage | |
| Long-Term Storage (Over 30 Days) | 44 |
| Specifications | |
| Product Registration | |
| Notes | |
| | |

INTRODUCTION

Specifications, descriptions, and illustrative material in this literature are as accurate as possible. Specifications are subject to change without notice. Illustrations might include optional equipment and accessories, and might not include all standard equipment. Your equipment might appear slightly different than pictured equipment.



Read and understand all provided literature. Literature contains specifications and information for safety, operation, maintenance, storage, and assembly specific to this product. Scan QR codes for more information.



For additional literature, including safety manuals where applicable, or questions regarding terms used in this manual, visit:

https://www.echo-usa.com/manuals



OR


https://www.shindaiwa-usa.com/manuals



SERVICING INFORMATION

Parts and Serial Number

Genuine Shindaiwa Parts and Assemblies for your Shindaiwa products are available only from an Authorized Service Dealer. When you do need to buy parts always have the Model Number and Serial Number of the unit with you. Image shows serial number location. For future reference, write them in the space provided below.

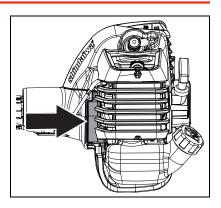

| Model No | _ Serial No |
|----------|-------------|
|----------|-------------|

Service

Service of this product during the warranty period must be performed by an Authorized Service Dealer. For the name and address of the Authorized Service Dealer nearest you, ask your retailer or call: 1-877-986-7783. Dealer information is also available on www.shindaiwa-usa.com. When presenting your unit for Warranty service/repairs, proof of purchase is required.

Consumer Product Support

If you require assistance or have questions concerning the application, operation or maintenance of this product you may call the Shindaiwa Consumer Product Support Department at 1-877-986-7783 from 8:00 am to 5:00 pm (Central Standard Time) Monday through Friday. Before calling, please know the model and serial number of your unit.

Product Registration

To ensure trouble free warranty coverage it is important that you register your Shindaiwa equipment on-line at www.shindaiwa-usa.com or by filling out the product registration sheet included in this manual. Registering your product confirms your warranty coverage and provides a direct link between you and ECHO if we find it necessary to contact you.

Additional Literature

In addition to finding information online, information is available from your Authorized Service Dealer, or by contacting ECHO Incorporated, 400 Oakwood Road, Lake Zurich, IL 60047, 1-800-432-ECHO (3246).

T302 **SAFETY**

SAFETY

International Symbols

| Symbol | Description | Symbol | Description |
|------------------|--|---------------------|---|
| | Warning, see operator's manual. | I | Carburetor adjustment (high speed) |
| | Wear eye, ear and head protection. | H | Carburetor adjustment (idle speed) |
| | Wear hand and foot protection. | | Carburetor adjustment (low speed) |
| <u> </u> | Safety/Alert | STOP | STOP switch |
| atrillitutistis. | Hot surface | +6 | Fuel and oil mixture |
| | Do not allow flames or sparks near fuel. | Ignition ON OFF OFF | Ignition ON / OFF |
| 3 | Do not smoke near fuel. | • | Purge bulb |
| | Choke control RUN position (choke open) | → | Choke control COLD START position (choke closed) |

SAFETY T302

| Symbol | Description | Symbol | Description |
|--|---|---|---|
| | Keep feet away from blade. | | Rotating cutting attachment. |
| | Thrown objects | | Direction of blade |
| | Do not use line heads, use blades only. | 5 | Do not use blades, use line heads only. |
| Keep bystanders and helpers awa 15 m (50 ft.). | | rs and helpers away | |
| | | Avoid kick-out. Keep bystanders and helpers away 15 m (50 ft.). | |
| | | Beware of throw protection. | vn objects. Wear eye |

Note: Not all symbols will appear on your unit.



T302 SAFETY

Personal Condition and Safety Equipment

WARNING

Cancer and Reproductive Harm www.P65Warnings.ca.gov

WARNING

The muffler or catalytic muffler and surrounding cover may become extremely hot. If unit is equipped with muffler, always keep clear of exhaust and muffler area, otherwise serious personal injury might occur.

WARNING

Users of this product risk injury to themselves and others if the unit is used improperly and/or safety precautions are not followed. Proper clothing and safety gear must be worn when operating unit.

Physical Condition

Your judgment and physical dexterity may not be good:

- · If you are tired or sick
- · If you are taking medication
- · If you have taken alcohol or drugs

Operate unit only if you are physically and mentally well.

Eye Protection

WARNING

- Eye protection that meets ANSI Z87.1 or CE requirements must be worn whenever you operate the unit.
- For additional safety, a full-face shield (not included) can be worn over safety glasses or goggles to provide protection from sharp branches or flying debris.

SAFETY T302

Hand Protection

Wear sturdy, no-slip, rubber work gloves to improve your grip on the handles. Gloves also provide protection against cuts and scratches, cold environments, and reduce the transmission of machine vibration to your hands.

Hearing and Ear Protection

ECHO recommends wearing personal protective equipment whenever unit is used.

Breathing Protection

Operators who are sensitive to dust or other common airborne allergens may need to wear a dust mask to prevent inhaling these materials while operating unit. Dust masks can provide protection against dust, plant debris, and other plant matter such as pollen. Make sure the mask does not impair your vision, and replace the mask as needed to prevent air restrictions.

Proper Clothing

Wear snug-fitting, durable clothing:

- · Pants should have long legs, shirts should have long sleeves.
- Do not wear shorts.
- Do not wear ties, scarves, jewelry, or clothing with loose or hanging items that could become entangled in moving parts or surrounding growth.
- Keep clothing buttoned or zipped, and keep shirt tails tucked in.

Wear sturdy work shoes with nonskid rubber soles.

- Do not wear open toed shoes.
- Do not operate unit with bare feet.

Keep long hair away from engine and air intake. Retain hair with cap or net.

Heavy protective clothing can increase operator fatigue, which may lead to heat stroke. Schedule heavy work for early morning or late afternoon hours when temperatures are cooler.

T302 SAFETY

WARNING

The components of this machine generate an electromagnetic field during operation, which can interfere with some pacemakers. To reduce the risk of serious or fatal injury. persons with pacemakers should consult with their physician and the pacemaker manufacturer before operating this machine. In the absence of such information, ECHO does not recommend the use of this machine by anyone who has a pacemaker.

Extended Operation and Extreme Conditions

CAUTION

Prolonged exposure to cold and/or vibration can result in injury. Read and follow all safety and operation instructions to minimize risk of injury. Failure to follow instructions can result in painful wrist/hand/arm injuries.

It is believed that a condition called Raynaud's Phenomenon, which affects the fingers of certain individuals, may be brought about by exposure to vibration and cold. Exposure to vibration and cold may cause tingling and burning sensations, followed by loss of color and numbness in the fingers. The following precautions are strongly recommended, because the minimum exposure which might trigger the ailment is unknown.

- Keep your body warm, especially the head, neck, feet, ankles, hands, and wrists.
- Maintain good blood circulation by performing vigorous arm exercises during frequent work breaks, and also by not smoking.
- Limit the hours of operation. Try to fill each day with jobs where operating the unit or other hand-held power equipment is not required.
- If you experience discomfort, redness, and swelling of the fingers followed by whitening and loss of feeling, consult your physician before further exposing yourself to cold and vibration.


SAFETY T302

Repetitive Stress Injuries (RSI)

It is believed that overusing the muscles and tendons of the fingers, hands, arms, and shoulders may cause soreness, swelling, numbness, weakness, and extreme pain in those areas. Certain repetitive hand activities may put you at a high risk for developing a Repetitive Stress Injury (RSI). An extreme RSI condition is Carpal Tunnel Syndrome (CTS), which could occur when your wrist swells and squeezes a vital nerve that runs through the area. Some believe that prolonged exposure to vibration may contribute to CTS. CTS can cause severe pain for months or even years.

To reduce the risk of RSI/CTS, do the following:

- Avoid using your wrist in a bent, extended, or twisted position. Instead try to maintain a straight wrist position. Also, when grasping, use your whole hand, not just the thumb and index finger.
- Take periodic breaks to minimize repetition and rest your hands.
- Reduce the speed and force with which you do the repetitive movement.

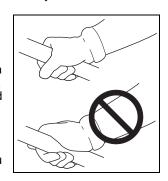

- Do exercises to strengthen the hand and arm muscles.
- Immediately stop using all power equipment and consult a doctor if you feel tingling, numbness, or pain in the fingers, hands, wrists, or arms. The sooner RSI/CTS is diagnosed, the more likely permanent nerve and muscle damage can be prevented.

▲ DANGER

All overhead electrical conductors and communications wires can have electricity flow with high voltages. This unit is not insulated against electrical current. Never touch wires directly or indirectly, otherwise serious injury or death can result.

▲ DANGER

Do not operate gas-powered products indoors or in inadequately ventilated areas. Engine exhaust contains poisonous emissions and can cause serious injury or death.

Read Manuals

 Provide all users of this equipment with literature for instructions on safe operation. T302 SAFETY

Clear the Work Area

 Always clear the work area of foreign objects such as rocks, broken glass, nails, wire, or string, and check for any hidden hazards. Spectators and fellow workers must be warned, and children and animals prevented from coming nearer than 15 m (50 ft.) while the unit is in use.

- Outside the 15 m (50 ft.) zone, there is still a risk of injury from thrown objects.
- · Bystanders should be encouraged to wear eye protection.
- · If you are approached, stop the engine and cutting attachment.
- When a bladed unit is used, there is the added risk of injury to bystanders being struck with the moving blade in the event of a blade thrust or other unexpected reaction of the blade.

Keep a Firm Grip

 Always hold throttle handle and support handle with thumbs and fingers tightly encircling the handles.

Keep a Solid Stance

- Maintain footing and balance at all times. Do not stand on slippery, uneven or unstable surfaces. Do not work in odd positions or on ladders. Do not overreach.
- Keep cutting attachment below waist.
- Keep all body parts away from rotating cutting attachment.

Avoid Hot Surfaces

 If unit is equipped with muffler, keep exhaust area clear of flammable debris. Avoid contact during and immediately after operation.





SAFETY T302

Equipment

WARNING

Use only approved attachments. Serious injury may result from the use of a non-approved attachment combination. ECHO Incorporated will not be responsible for the failure of cutting devices, attachments or accessories which have not been tested and approved by ECHO Incorporated. Read and comply with all safety instructions.

- · Do not attempt to modify this product. Serious injury can result from the use of any modified product.
- · Check unit for loose or missing nuts, bolts, and screws. Tighten or replace as needed.
- · Inspect shield for damage and ensure that shield is properly installed, and that the cut-off knife is securely in place. Replace if either is damaged or missing.
- · Check that the cutting attachment is firmly attached and in safe operating condition.
- Ensure that manufacturer recommended flexible nonmetallic line is installed in the trimmer head.
- · Ensure that throttle trigger, throttle trigger lockout, and stop switch all work properly.
- · Check that handle and harness (if included) are installed and adjusted for safe, comfortable operation. See Assembly Section for proper adjustment.

WARNING

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings.

- · Always stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before disassembling unit, removing obstructions, clearing debris, or servicing unit.
- · Do not connect spark plug lead to spark plug until unit is ready for use.
- · Do not start or operate unit unless all guards and protective covers are properly assembled to unit.
- · Never reach into any opening while the engine is running. Moving parts may not be visible through openings.

T302 SAFETY

· Position wiring safely to prevent snagging, separation of connectors, or breakage during operation. Gather excess wire, and secure with wiring clamp if provided on equipment, or tuck behind the air filter area. Do not place wiring directly against hot engine components.

- · Check wiring and connectors for nicks, cuts, exposed wire, or other damage, and repair or replace as needed. Exposed wire or connectors can cause shocks, sparks, and risk of fire or explosion, resulting in serious injury.
- Check wire terminals for secure connections.

WARNING

Periodically check fuel system (fuel lines, vent, grommet, fuel tank, and fuel cap) for leaks especially if the unit is dropped. If damage or leaks are found, do not use unit, otherwise serious personal injury or property damage may occur. Have unit repaired by an Authorized Service Dealer before using.

SAFETY T302

CARB and EPA Emission Control Information

The emission control system for the engine is EM (engine modification) and, if the second to last character of the Engine Family on the Emission Control Information label (sample below) is "B", "C", "K", or "T", the emission control system is EM and TWC (3-way catalyst). The fuel tank/fuel

EMISSION CONTROL INFORMATION ENGINE FAMILY: FERNS.0214EQ DISPLACEMENT: 21.2cc EMISSION COMPLIANCE PERIOD: 50Hours THIS ENGINE MEETS 2013 U.S.EPA EXH/EVP & CALIFORNIA EXH/EVP EMISSION REGULATIONS FOR S.O.R.E. REFER TO OWNER'S MANUAL FOR MAINTENANCE SPECIFICATIONS AND ADJUSTMENTS.

YAMABIKO CORP. MMM/YYYY



line emission control system is EVAP (evaporative emissions). Evaporative emissions for California models are only applicable to fuel tanks and fuel feed lines.

An Emission Control Label is located on the engine. (This is an EXAMPLE ONLY, information on label varies by engine FAMILY).

EMISSION CONTROL INFORMATION

ENGINE FAMILY: CEHXS.0214KL DISPLACEMENT: 21.2cc EMISSION COMPLIANCE PERIOD: 300Hours THIS ENGINE MEETS 2012 U.S. EPA EXH/EVP & CALIFORNIA EXH/EVP EMISSION REGULATIONS FOR S.O.R.E. REFER TO OWNER'S MANUAL FOR MAINTENANCE SPECIFICATIONS AND ADJUSTMENTS.

YAMABIKO CORP. MMM/YYYY E




Product Emission Durability (Emission Compliance Period)

The 50 or 300 hour emission compliance period is the time span selected by the manufacturer certifying the engine emissions output meets applicable emissions regulations, provided that approved maintenance procedures are followed as listed in the Maintenance Section of this manual.

DESCRIPTION

Locate the safety decal(s) or etching(s) on your unit. Make sure they are legible, and that you understand and follow the instructions. If any cannot be read, replacements can be ordered from your dealer. Images shown below are for example only. Those on your unit might appear slightly different.

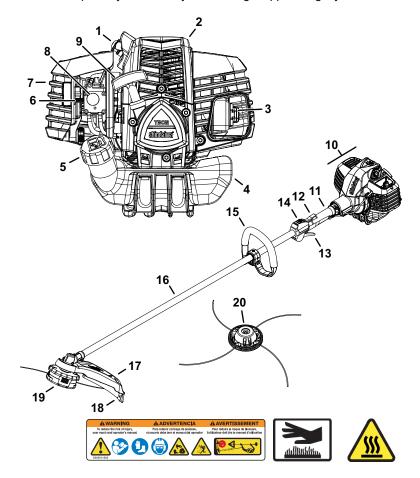

CONTENTS T302

- Spark plug
- 2. Top guard
- 3. Spark arrester muffler or spark arrester muffler with catalyst
- Fuel tank
- 5. Fuel tank cap
- Choke
- Air filter
- 8. Purge bulb
- 9. Recoil starter handle
- 10. Power head
- 11. Throttle handle for right hand
- 12. Throttle trigger lockout
- 13. Throttle trigger
- 14. Stop switch
- 15. Support handle for left hand
- 16. Drive shaft assembly
- Debris shield with cut-off knife
- Cut-off knife
- 19. Nylon cutter head
- 20. Heavy duty fixed line head (HDFH) HDFH models only

CONTENTS

The SHINDAIWA product you purchased has been factory pre-assembled for your convenience. Due to packaging restrictions, some assembly may be necessary.

After opening the carton, check for damage. Immediately notify your retailer or SHINDAIWA Dealer of damaged or missing parts. Use the contents list to check for missing parts.

- 1 Power head / drive shaft assembly
- 1 Operator's manual
- 1 Warranty statement
- 2 Pre-cut nylon line HDFH models only


T302 **ASSEMBLY**

ASSEMBLY

Support Handle


Label (A) shows minimum spacing for support handle location.

If necessary, position support handle for comfortable operation and securely tighten screws.

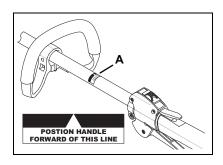


Line Installation - HDFH Models

 - Install trimmer line as shown:
 - 2 line



4 line

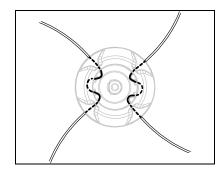

OPERATION T302

OPERATION

WARNING

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings. Always stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit.

WARNING

Engine exhaust is hot, and contains Carbon Monoxide (CO), a poison gas. Breathing CO can cause unconsciousness, serious injury, or death. Exhaust can cause serious burns. Always position unit so that exhaust is directed away from your face and body.

WARNING

Operation of this equipment may create sparks that can start fires around dry vegetation. This unit is equipped with a spark arrester to prevent discharge of hot particles from the engine. Metal cutters can also create sparks if the cutter strikes rocks, metal, or other hard objects. Contact local fire authorities for laws or regulations regarding fire prevention requirements.

Fuel

WARNING

Diesel fuels and alternative fuels, such as E15 (15% ethanol), E85 (85% ethanol) or any fuels not meeting Shindaiwa requirements are NOT approved for use in Shindaiwa 2-stroke or Hybrid 4-stroke gasoline engines. Use of diesel or alternative fuels may cause performance problems, loss of power, overheating, fuel vapor lock, and unintended machine operation, including, but not limited to, improper clutch engagement. Diesel or alternative fuels may also cause premature deterioration of fuel lines, gaskets, carburetors and other engine components.

Fuel Requirements

Gasoline - Use fresh (purchased within the last 30 days from the pump) 89 Octane [R+M/2] (mid grade or higher) gasoline known to be good quality. Gasoline may contain up to 10% Ethanol (grain alcohol) or 15% MTBE (methyl tertiary-butyl ether). Gasoline containing methanol (wood alcohol) is **NOT** approved. Use of ECHO branded fuel is recommended to extend engine life in all air-cooled 2-stroke and 2/4-stroke hybrid engines.

Two Stroke Oil - A 2-stroke engine oil, such as Shindaiwa branded 2-stroke oils, meeting ISO-L-EGD (ISO/CD 13738) and J.A.S.O. FD Standards must be used. Shindaiwa branded 2-stroke oils meet these standards. Engine problems due to inadequate lubrication caused by failure to use an ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345-FD certified oil will void the 2-stroke engine warranty.

WARNING

Two-Stroke engine oil contains petroleum distillates and other additives that may be harmful if swallowed. Heated oil can release vapors that can cause flash fire, or ignite with explosive force. Read and follow the oil manufacturer's instructions, and observe all safety warnings and precautions for handling flammable liquids. For more detailed safety and first aid information, visit www.echo-usa.com for a copy of the Material Safety Data Sheet.

- KEEP OUT OF REACH OF CHILDREN.
- If swallowed, do not induce vomiting. CALL PHYSICIAN OR A POISON CONTROL CENTER IMMEDIATELY.
- WEAR SAFETY GLASSES when mixing or handling.
- · AVOID repeated or prolonged skin contact.
- AVOID inhaling oil mists or vapors.

NOTICE

Shindaiwa branded 2-stroke oils may be mixed at 50:1 ratio for application in all Shindaiwa engines sold in the past, regardless of ratio specified in those manuals.

OPERATION T302

Handling Fuel

A DANGER

Fuel is VERY flammable. Use extreme care when mixing, storing or handling, or serious personal injury may result.

- · Use an approved fuel container.
- DO NOT smoke near fuel.
- · DO NOT allow flames or sparks near fuel.
- Fuel tanks/cans may be under pressure. Always loosen fuel caps slowly allowing pressure to equalize.
- NEVER refuel a unit when the engine is HOT or RUNNING!
- DO NOT fill fuel tanks indoors. ALWAYS fill fuel tanks outdoors over bare ground.
- · DO NOT overfill fuel tank. Wipe up spills immediately.
- Securely tighten fuel tank cap and close fuel container after refueling.
- Inspect for fuel leakage. If fuel leakage is found, do not start or operate unit until leakage is repaired.
- Use caution when handling fuel. Mix and pour fuel outdoors where there are no sparks and flames. Slowly remove the fuel cap only after stopping the engine and allowing the unit to cool. Do not smoke while fueling or mixing fuel. Move the unit at least 10 feet (3 m) from the fueling point before starting the engine.

▲ DANGER

Gasoline vapor is heavier than air, and can travel along the ground to nearby sources of ignition such as electrical motors, pilot lights, and hot or running engines. Vapors ignited by an ignition source can flash back to the fuel container, resulting in an explosion, fire, serious or fatal injuries, and extensive property damage.

Mixing Instructions

- Fill an approved fuel container with half of the required amount of gasoline.
- 2. Add the proper amount of engine oil to gasoline.
- Close container and shake to mix oil with gasoline.
- 4. Add remaining gasoline, close fuel container, and mix.

| FUEL TO OIL MIX - 50:1 RATIO | | | | | |
|------------------------------|-----------|-----|-----|--|------|
| U | US Metric | | US | | tric |
| Gas | Oil | Gas | Oil | | |
| gal. | fl. oz. | L | СС | | |
| 1 | 2.6 | 5 | 100 | | |
| 2 | 5.2 | 10 | 200 | | |
| 5 | 13 | 25 | 500 | | |

NOTICE

Spilled fuel is a leading cause of hydrocarbon emissions. Some states may require the use of automatic fuel shut-off containers to reduce fuel spillage.

After use

 Empty the fuel tank prior to storing the unit. Return unused fuel to an approved fuel storage container.

Storage - Fuel storage laws vary by locality. Contact your local government for the laws affecting your area. As a precaution, store fuel in an approved, airtight container. Store in a well-ventilated, unoccupied building, away from sparks and flames.

NOTICE

Stored fuel ages. Do not mix more fuel than you expect to use in thirty (30) days, ninety (90) days when a fuel stabilizer is added.

NOTICE

Stored 2-stroke fuel may separate. ALWAYS shake fuel container thoroughly before each use.

NOTICE

Used oil and gasoline, and soiled towels are hazardous waste materials. Disposal laws vary by locality.


OPERATION T302

Starting Cold Engine


WARNING

The attachment will operate immediately when the engine starts, and could result in possible serious injury. Keep movable parts of the attachment away from objects that could become entangled or thrown, and surfaces that could cause loss of control.


Move stop switch (A) away from the STOP position.

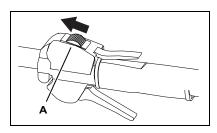

- 2. Move choke (B) to COLD START position.
- 3. Pump purge bulb (C) until fuel is visible and flows freely in the clear fuel tank return line. Pump the bulb 4-5 times.

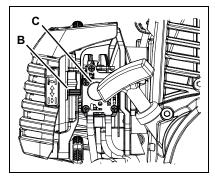

Lay the unit on a flat area and keep movable attachment parts clear of all obstacles. Firmly grasp throttle handle and throttle trigger lockout (E) with left hand and fully depress throttle trigger (F) to wide open position. Rapidly pull recoil starter handle/rope (D) until engine fires (or maximum five pulls).

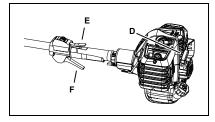

T302 OPERATION

5. After engine fires (or five pulls), move choke (B) to the RUN position. Firmly grasp throttle handle and throttle trigger lockout with left hand and fully depress throttle trigger to wide open position. Pull starter handle/rope until engine starts and runs. Release throttle trigger and allow unit to warm up at idle for several minutes.

Note: If engine does not start with choke in RUN position after five pulls, repeat steps 2 - 5.

After engine warm-up, grip throttle handle and support handle. Depress the throttle trigger lockout, and gradually depress throttle trigger to increase engine RPM to operating speed.

Starting Warm Engine


The starting procedure is the same as Cold Start procedure except do not close the choke, and do not hold throttle trigger fully depressed.

WARNING


The attachment should not move at idle, otherwise serious personal injury may result.

If attachment moves, readjust carburetor according to Carburetor Adjustment instructions in this manual or see your Authorized Service Dealer.

1. Move stop switch (A) away from the STOP position.

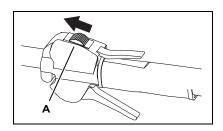


2. Pump purge bulb (B) until fuel is visible and flows freely in the clear fuel tank return line. Pump bulb 4-5 times.

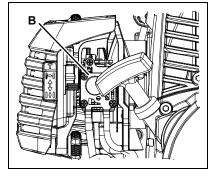

T302 OPERATION

 
3. Lay the unit on a flat area and keep movable attachment parts clear of all obstacles. Firmly grip throttle handle and throttle trigger lockout (E) with left hand. Rapidly pull recoil starter handle/rope (D) until engine fires.



Note: If engine does not start after five pulls, use Cold Start Procedure.

Stopping Engine

- Release throttle trigger and allow engine to return to idle before shutting off engine.
- 2. Move stop switch (A) to STOP position.

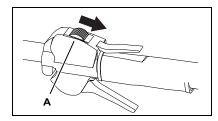

WARNING

The cutting attachment will continue to rotate even after the throttle is released. Maintain control of the unit until it has come to a complete stop.

WARNING

If engine does not stop when stop switch is moved to STOP position, close choke (COLD START position) to stall engine. Have your Authorized Service Dealer repair stop switch before using unit again.

OPERATION T302

Applications

WARNING

Incorrect unit positioning can cause loss of control and serious personal injury. Always hold throttle handle with right hand and support handle with left hand, positioning unit on right side of body.

WARNING

Do not install blades on GT (Curved Shaft) or T model trimmers.

Operating Techniques - Nylon Line Head

Nylon line heads may be used for trimming, scything, edging, and scalping of grass and light weeds.

Units with Speed-Feed® line heads only: To advance trimmer line, tap trimmer head against the ground while the head is turning at normal operating speed.

Trimming

Feed the spinning line into the material to be cut. Tilt the line head to one side to direct cutting debris away from you:

- Model SRM/PAS/SB/TX/C/T (Straight shaft, counterclockwise line **head rotation):** Tilt the cutting head down on the right side (muffler side) while cutting to direct cutting debris away from operator. Feed the line gradually into the material you wish to cut, avoiding contact with fences or other barriers.
- GT models: Tilt cutting head to the left while cutting to direct debris away from the operator.

Scything

Scything - Swing the cutting head in a level arc, gradually feeding the line into the material being cut. Move forward with each arc to cut a swath. Width of cutting swath depends on arc. Use a larger arc for a wider swath, or a smaller arc for a narrow swath. Keep line head tilted to direct cutting debris forward or away from you.

OPERATION T302

Edging and Scalping

Both of these are done with the nylon line cutting head tilted at a steep angle. Scalping is removing top growth, leaving the earth bare. Edging is trimming the grass back where it has spread over a pavement or driveway. During both edging and scalping, hold the unit at a steep angle in a position where the debris, and any dislodged dirt and stone, will not come back towards you even if it ricochets off the hard surface.

General

- Debris flows in direction of line head rotation. Change line head position to ensure debris flow is directed away from operator.
- · Keep cutting line away from wire fences to avoid entanglement.
- · Operate trimmer only with cutting head below knee height.

Operating Techniques - Metal or Plastic Blade

Brush cutter blades may be used to cut and trim a wide variety of materials, refer to the blade selection section for determining the correct blade for the application.

Scything (3-, 8-, and 80-tooth weed/grass, and brush blades)

- To cut large sections of field grass and weeds swing the cutting head in a level arc, gradually feeding the blade into the material being cut. Adjust throttle speed according to the work.
- Do not swing the main pipe with arms. Turn hips to swing the blade horizontally from right to left, and cut weeds on the left side of the blade.
- Do not scythe back and forth as the grass may scatter and kickback may occur easily.
- Tilt blade left by 5 to 10 degrees so that cut grasses will push left, making progress easier.
- Move forward with each arc to cut a swath.
- Width of cutting swath depends on arc. Use a larger arc for a wider swath, or a smaller arc for a narrow swath. Suggested cutting width is about 1.5 m (4.9 ft).
- When scything large brush up to 12.7 mm (0.5 in.) diameter from right to left, avoid cutting with highlighted section.





T302 OPERATION

Reaction Forces

WARNING

- · The cutting attachment will continue to rotate even after the throttle is released, maintain control of the unit until it has come to a complete stop.
- · Blade thrust may occur when the spinning blade contacts an object that it does not immediately cut. Following proper cutting techniques will prevent blade thrust.
- · Blade thrust can be violent enough to cause the unit and/or operator to be propelled in any direction, and possibly lose control of the unit.
- Blade thrust can occur without warning if the blade snags, stalls or binds.
- · Blade thrust is more likely to occur in areas where it is difficult to see the material being cut.

Push or Pull - Kickout

During normal use, operating a brushcutter with a circular metal blade can produce sudden strong reaction forces that are difficult to control. Strong reaction forces can cause a loss of balance or loss of control of the equipment, resulting in serious injury to operator and bystanders.

Understanding what causes these reactive forces may help you to avoid them, and can help you to maintain control of the equipment if you experience a sudden reaction during cutting. Reactive forces occur when the force being applied by the cutting teeth of a blade meet resistance, and some of the cutting force is directed back toward the equipment. The greater the cutting force or the amount of resistance, the greater the reactive force.

Push and Pull Forces


Push and pull forces are reactive forces that push the equipment directly toward the operator, or that pull the equipment directly away from the operator. These forces are the result of cutting on the sides of the blade. The direction of the force depends on the side of the blade being used, and the direction of blade rotation at the point of contact. The reactive force is in the opposite direction of blade rotation at the contact point, regardless of where the contact is being made. These types of reactive forces are also called "blade thrust." As shown in the illustration, a blade turning counterclockwise will cause the equipment to pull away from the operator if the point of cutting resistance is on the left side of the blade. If the point of cutting resistance is on the right side of the blade,



the equipment will push back toward the operator. In both examples, the reactive force is in the opposite direction of blade rotation at the contact point where resistance occurs.

Kickout

Kickout is also a reactive force caused by resistance to cutting, but the direction of blade thrust is lateral (to the left or right of the blade), instead of forward or back toward the operator. In most cases, push, pull, and kickout can be reduced or eliminated by:

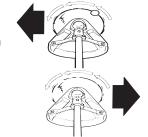

- · Using the correct blade for the cutting job.
- · Using properly sharpened blades.
- Applying consistent, even force to the blade during the cut.
- · Avoiding obstacles and ground hazards.
- Using extra care when cutting harder materials such as extremely dry brush, saplings, and small trees.
- · Cutting from a stable, secure position.

Blade Cutting Problems

Binding - Blades may bind in the cut if dull or forced. Binding can damage blade, and result in blade breakage or injury from fragments and flying debris. If a blade binds in a cut, do not try to get it out by applying up and down force to pry the cut open. Applying prying force to the blade can bend the blade, and result in blade failure and injury.



To free a blade that is bound in the cut, stop the engine, and support the trimmer or brushcutter to

keep stress off the blade. Push the tree away from the entry point of the cut to open the cut, and pull the blade directly away from the cut in a straightline motion. Use caution when releasing the tree to avoid being struck by spring-back or falling.

Inspect the blade for damage before proceeding. Sharpen teeth if dull, or replace blade if cracked, bent, missing teeth, or otherwise damaged.

To prevent binding:

- Keep blades sharp.
- Avoid excessive pressure during cuts.
- · Do not exceed cutting capacity of blade.
- · Do not use blades with damaged or missing cutting teeth.
- Do not tilt blade when cutting.

MAINTENANCE

WARNING

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings. Always stop unit, disconnect spark plug or remove battery, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit. Allow the unit to cool before performing maintenance or adjustments. Wear gloves to protect hands from sharp edges and hot surfaces.

▲ WARNING

Operating a poorly maintained unit can result in serious injuries to operator or bystanders. Always follow all maintenance instructions as written, otherwise serious personal injury can result.

Your unit is designed to provide of trouble-free service. Perform regular scheduled maintenance. If you are unsure about the task, or are not equipped with the necessary tools, we recommend that you take your unit to an Authorized Service Dealer for maintenance. To help you decide whether you want to do it yourself or have the Authorized Service Dealer do it, each maintenance task has been graded. If a task is not listed, see your Authorized Service Dealer for repairs.

NOTICE

The use of emission control components other than those specifically designed for this unit is a violation of federal law.

Skill Levels

Level 1 = Easy to do. Common tools may be required.

Level 2 = Moderate difficulty. Some specialized tools may be required.

Level 3 = See your Authorized Service Dealer.

Click HERE or go to http://www.echo-usa.com/products/maintenance-kit

or

https://www.shindaiwa-usa.com/you-can.aspx

Maintenance Intervals

| COMPONENT OR SYSTEM | MAINTENANCE PROCEDURE | SKILL LEVEL | |
|---------------------------------|--------------------------------------|----------------|--|
| Daily or Before Use | | | |
| Air Filter | Inspect/Clean ¹ | 1 | |
| Choke Shutter | Inspect/Clean ¹ | 1 | |
| Fuel System | Inspect ² | 1 | |
| Cooling System | Inspect/Clean | 2 | |
| Recoil Starter Rope | Inspect/Clean ¹ | 1 | |
| Screws/Nuts/Bolts | Inspect/Tighten/Replace ¹ | 1 | |
| Every Refuel | | | |
| Fuel System | Inspect ² | 1 | |
| 3 Months | | | |
| Air Filter | Replace ¹ | 1 | |
| Fuel Filter | Inspect ¹ | 1 | |
| Fuel Cap Gasket | Inspect ¹ | 1 | |
| Spark Plug | Inspect/Clean/Replace ¹ | 1 | |
| Muffler Spark Arrester | Inspect/Clean/Replace ¹ | 2 | |
| Cylinder Exhaust Port | Inspect/Clean/De-carbon | 2 | |
| Drive Shaft (flex cable models) | Grease ³ | 2 | |
| Gear Housing | Grease ⁴ | 2 | |
| Yearly | | | |
| Fuel Filter | Inspect/Replace ¹ | 1 | |
| Fuel Cap Gasket | Replace ¹ | 1 | |

Note: Time intervals shown are maximum. Actual use and your experience will determine the frequency of required maintenance.

31

X7502352402

¹ Replacement is recommended based on the finding of damage or wear during inspection.


² Low evaporative fuel tanks do not require regular maintenance to maintain emission integrity.

Air Filter


Level 1

Parts required: Tune-up kit.

- 1. Close choke (COLD START position) to prevent dirt from entering the carburetor throat.
- 2. Brush accumulated dirt from air filter area.
- 3. Remove air filter cover and clean inside and out.
- 4. Keep throttle wire retaining clip (A) in place as shown when removing or installing air filter cover.

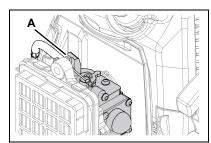

- 5. Remove foam pre-filter (B).
- 6. Remove filter cage (C).
- 7. Remove air filter (D).
- 8. Clean foam pre-filter (B) in water/detergent solution and rinse with clean water.
- 9. Wrap foam pre-filter (B) in a clean, dry cloth and squeeze (do not wring) dry. Allow to dry completely before reuse. Do not oil.

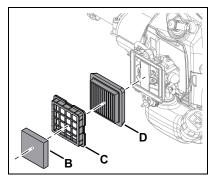


Brush debris from air filter (D). Replace if damaged, fuel soaked, dirty, or the rubber sealing edges are deformed

³ Apply lithium-based grease every 25 hours of use.

⁴ Apply lithium-based grease every 50 hours of use.

- 11. Install air filter (D) with pleats oriented vertically.
- 12. Install filter cage (C).
- 13. Install foam pre-filter (B).
- 14. Install air filter cover.

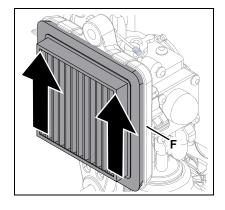


Fuel Filter

Level 1


Parts required: Tune-up kit.

Fuel is flammable. Use extreme care when mixing, storing or handling, or serious personal injury may result.

- 1. Use a clean cloth to remove loose dirt from around fuel cap and empty fuel tank.
- Empty the fuel tank into an 2. approved container.
 - When inside of fuel tank is dirty, rinse with gasoline to clean it.
- 3. Remove fuel filter (A) and inspect it. Replace if required.
- Do not remove the wire coil 4. clamp to remove fuel filter (A). Pinch fuel filter with fingers on
 - one hand and fuel line with other hand. Pull and twist to separate.

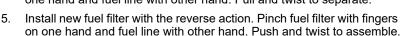

Note: Federal EPA regulations require all model year 2012 and later gasoline powered engines produced for sale in the United States to be equipped with a special low permeation fuel supply hose between the carburetor and fuel tank. When servicing model year 2012 and later equipment, only fuel supply hoses certified by EPA can be used to replace the original equipment supply hose. Fines up to \$37,500 may be enforced for using an un-certified replacement part.

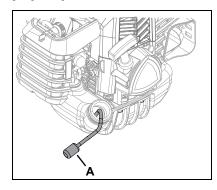

Spark Plug


Level 2

Parts required: Tune-up kit.

NOTICE

Use only NGK CMR7H spark plug. Do not sandblast to clean to avoid damage to the unit.

 - 1. Remove spark plug from cylinder and inspect for fouling, worn, or rounded center electrode.
- 2. Clean or replace spark plug.
- 3. Adjust spark plug gap to 0.65 mm (0.026 in.).
- 4. Install spark plug to cylinder, Tighten to 102-153 kgf•cm (89-133 lbf•in).



Cooling System

Level 2


NOTICE

To maintain proper engine operating temperatures, cooling air must pass freely through the engine cover (A). This flow of air carries combustion heat away from the engine.


Overheating and engine seizure can occur when:

- Air intakes are blocked, preventing cooling air from reaching the cylinder.
- · Dust and grass build up on outside of cylinder. This build up insulates the engine and prevents heat from leaving.


Removal of cooling passage blockages or cleaning of cooling fins is considered normal maintenance. Any failure attributed to lack of maintenance is not warranted.

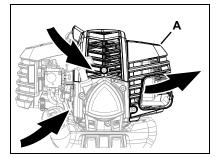


- 1. Remove muffler cover (A).
- 2. Remove engine cover (B).
- 3. Remove air filter cover (C).
- Close choke (COLD START 4. position) to prevent dirt from entering the carburetor throat.
- 5. Use a brush with plastic or nylon bristles to remove dirt from the cylinder fins.

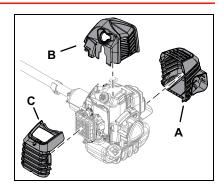

6. Remove grass and leaves from grid (C) between recoil starter and fuel tank.

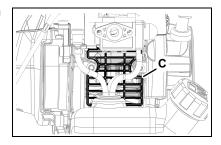

- 7. Install muffler cover (A).
- 8. Install engine cover (B).
- 9. Install air filter cover (C).

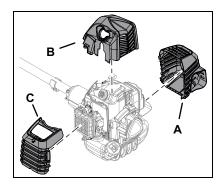


Exhaust System

Spark Arrester Screen

Level 2

Parts required: Spark arrester screen, gasket.

- 1. Remove muffler cover (A).
- Place piston at Top Dead Center (TDC) to prevent debris from entering cylinder.
- Remove spark arrester screen cover (B), gasket (C), and spark arrester screen (D), from muffler body.
- 4. Clean carbon deposits from muffler components.

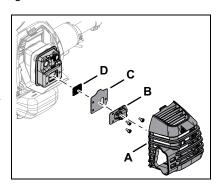

NOTICE

When cleaning carbon deposits, do not damage catalytic element inside muffler.

- 5. Replace screen if cracked, plugged, or has holes burned through.
- 6. Install spark arrester screen (D), gasket (C), and spark arrester screen cover (B), to muffler body.

Exhaust Port Cleaning

Level 2

Parts needed: Heat shield (as required).

NOTICE

Never use a metal tool to scrape carbon from the exhaust port. Do not scratch the cylinder or piston when cleaning the exhaust port. Do not allow carbon particles to enter the cylinder.

- Remove muffler cover (A). 1.
- 2. Remove muffler (B).
- 3. Remove heat shield (C).
- 4. Use a wood or plastic scraping tool to clean deposits from cylinder exhaust port (D).
- Inspect heat shield (C), replace 5. if damaged.
- Install heat shield (C) and 6. muffler (B).
- 7. Tighten muffler mounting bolts to 90-110 kgf•cm (80-95 lbf•in).
- 8. Install muffler cover (B).



Level 2.

WARNING

When carburetor adjustment is completed, the cutting attachment should not move at idle, otherwise serious personal injury may result.


Engine Break-In

New engines must be operated a minimum duration of two tanks of fuel break-in before carburetor adjustments can be made. During the break-in period your engine performance will increase and exhaust emissions will stabilize. Idle speed can be adjusted as required.

High Altitude Operation


This engine has been factory adjusted to maintain satisfactory starting, and durability performance up to 335 m (1,100 ft.) above sea level (ASL) (96.0 kPa). To maintain proper engine operation above 335 m (1,100 ft.) ASL the carburetor may need to be adjusted by an Authorized Service Dealer.

If the engine is adjusted for operation above 335 m (1,100 ft.) ASL. the carburetor must be re-adjusted when operating the engine below 335 m (1,100 ft.) ASL, otherwise severe engine damage may result.

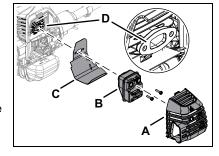

Note: Every unit is run at the factory and the carburetor is set in compliance with emission regulations. Carburetor adjustments, other than idle speed, must be performed by an authorized dealer.

 Set idle speed to 2,900 RPM. Turn idle screw (A) clockwise to increase it, or counterclockwise to decrease it.

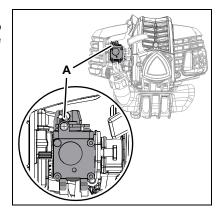

Lubrication

Level 1.


Parts required: Lithium-based

grease.

Gear Case


Note: Gear cases without a grease plug do not require lubrication.

- Clean all loose debris from gear case.
- Remove grease plug (A), if equipped, and check level of grease.
- Add grease if necessary. Fill to bottom of grease plug hole.
- 4. Install grease plug (A).
- 5. Connect spark plug lead to spark plug.

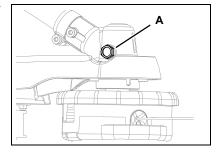


Drive Shaft (Flex Cable Only)

 Loosen screw (B) and remove locating screw (C). Pull gear case and shield from drive shaft housing.

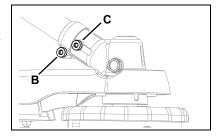


- 2. Pull flexible cable (D) from the drive shaft housing, wipe clean and coat with 15 ml (0.5 oz.) of grease.
- Slide the flexible cable (D) back 3. in the drive housing. Do not get dirt on the flex cable.
- Assemble driveshaft to gear housing and shield assembly.

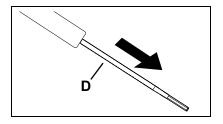

Nylon Line Head Disassembly Instructions

Note: For normal use, Speed-Feed® head disassembly is not necessary. However, if circumstances require disassembly, follow these instructions:

- 1. Press top of locking tabs (A) on both sides of Speed-Feed® head to release cover (B) from knob (C).
- Remove cover (B) from knob 2. (C).

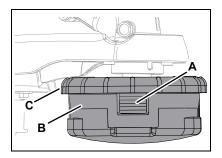


Nylon Line Replacement

CAUTION


Wear gloves or personal injury may result.

- Cut-off knife is sharp.
- · Gear case and surrounding area may be hot.
- Cut one piece of line to recommended length:
 - 2.0 mm (0.080 in.) diameter, 7.6 m (25 ft.)
 - 2.4 mm (0.095 in.) diameter, 7.6 m (25 ft.)


Align arrows on top of knob with 2. openings in eyelets.

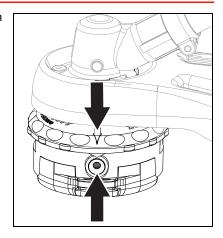

3. Insert one end of trimmer line into an eyelet, and push line equal distance through trimmer head.

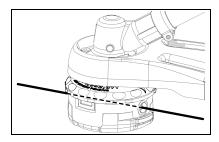


Hold trimmer head while turning 4. knob clockwise to wind line onto spool until about 13 cm (5 in.) of each line remains exposed.

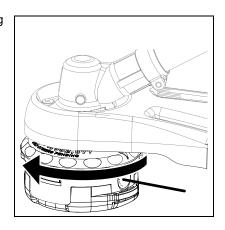

NOTICE

When the wear indicators located at the bottom of the Speed-Feed[®] head are worn smooth, or if holes appear, replacement of the cover or the entire Speed-Feed® head is required.

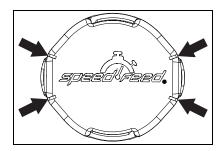

TROUBLESHOOTING

DANGER

Fuel vapors are flammable and can cause fire and/or explosion. Never test for ignition spark by grounding spark plug near cylinder plug hole, otherwise serious personal injury can result.

| E | NGINE PRO | BLEM TROU | BLESHOOTING | CHART |
|------------------------------|-----------------------------|------------------------|--|---|
| Problem | Check | Status | Cause | Remedy |
| | Fuel at carbure- tor. | No fuel at carburetor. | Fuel filter or fuel line obstructed. | Clean or replace. See your Authorized Service Dealer. |
| | | No fuel at cylinder. | Carburetor | See your Authorized Service Dealer. |
| | | | | Open choke. |
| | Fuel at cylinder. | Muffler wet | Fuel mixture | Clean or replace air filter. |
| Engine starts | | with fuel. | too rich. | Adjust carburetor. |
| hard. or | | | | See your Authorized Service Dealer. |
| Engine does not start. | Spark at | | Stop switch OFF. | Turn switch to ON. |
| | end of plug wire. | | Electrical problem. | See your Authorized |
| | | | Interlock switch. | Service Dealer. |
| | | No spark. | Incorrect gap. | |
| | Spark at | | Covered with carbon. | Adjust to 0.65 mm (0.026 in.). |
| | plug. | | Fouled with fuel. | |
| | | | Spark plug defective. | spark plug. |

| E | NGINE PRO | BLEM TROU | BLESHOOTING (| CHART |
|--------------------------------|-----------------------------|---|---|-------------------------------------|
| Problem | Check | Status | Cause | Remedy |
| | Air filter | Air filter dirty. | Normal wear. | Clean or replace. |
| | Fuel filter | Fuel filter dirty. | Contaminants or residue in fuel. | Replace filter or replace fuel. |
| Engine runs, but | Fuel vent | Fuel vent plugged. | Contaminated fuel. | Clean or replace. |
| dies. or | Spark plug | Plug dirty or worn. | Normal wear. | Clean and adjust or replace. |
| Engine does not acceler- | Carbure- tor | Improper adjust- ment. | Vibration | Adjust |
| ate properly. | Cooling system | Cooling system dirty or plugged. | Extended operation in dirty or dusty locations. | Clean |
| | Spark arrester screen | Spark arrester screen plugged. | Normal wear. | Replace |
| Engine does not crank. | N/A | | Internal engine problem. | See your Authorized Service Dealer. |

STORAGE T302

STORAGE

Transportation

- · Shut engine off before transporting.
- · Secure unit to prevent fuel spillage and damage.

Short-Term Storage

- · Shut engine off.
- · Store unit in a dry, dust-free place, out of the reach of children

Long-Term Storage (Over 30 Days)

A DANGER

Explosion hazard. Fuel fumes can accumulate and explode if exposed to an open flame or spark. Store in a well ventilated area.

Do not store your unit for a prolonged period of time (30 days or longer) without performing protective storage maintenance.

- 1. Move stop switch to STOP position.
- 2. Clean exterior of unit.
- 3. Perform required maintenance.
- Tighten all fasteners.

WARNING

Burn hazard. During operation the muffler or catalytic muffler and surrounding cover become hot. Always keep exhaust area clear of flammable debris during transportation or when storing, otherwise serious property damage or personal injury may result.

DANGER

Fire hazard. Fuel is flammable. Burning fuel will cause bodily injury or death. Wear protective equipment. Use care when mixing, storing or handling.

5. Drain fuel tank completely.

T302 STORAGE

6. Press purge bulb six to seven times to remove remaining fuel from carburetor then drain tank again.

- 7. Close choke, start and run the engine until it stops due to lack of fuel.
- 8. Allow engine to cool.
- 9. Remove spark plug lead from spark plug.
- 10. Remove spark plug from cylinder.
- 11. Pour 7 mL (0.25 fl. oz.) of two-stroke engine oil into cylinder through spark plug hole.
- Pull recoil starter handle two to three times to distribute oil inside engine.
- 13. Observe piston location through the spark plug hole. Pull the recoil handle slowly until the piston reaches the top of its travel and leave it there.
- Install spark plug.
- 15. Connect spark plug lead to spark plug.
- 16. Store unit in a dry, dust-free place, out of the reach of children.

A WARNING

Hedge trimmer blades are sharp. Avoid touching blades whenever possible, and always wear gloves to protect hands. Touching blades could lead to severe personal injury.

NOTICE

Always store and transport hedge trimmers in a stable, horizontal position. Support gear case and cutting blades to prevent excessive flexing, which may cause damage to these components. Always install blade cover when transporting or storing unit.

- Hedge trimmers only: Apply clean oil to the entire length of the blade.
 Be certain the blade bolts are lubricated.
- 18. **Hedge trimmers only:** Install blade guard on blades.

NOTICE

Some tree sap and resins are corrosive and can damage guide bars, saw chains and sprockets.

 Power pruners only: Wash the guide bar and sprocket areas after each use, then coat metal parts with oil.

SPECIFICATIONS

| MODEL | T302 |
|---------------------------------------|--|
| Length (without cutter head) | 1,808 mm (71.2 in.) |
| Width | 306 mm (12.0 in.) |
| Height | 344 mm (13.5 in.) |
| Weight - dry (without cutter head) | 5.5 kg (12.1 lb.) |
| Engine Type | Air cooled, two-stroke, single cylinder gasoline engine |
| Bore | 36 mm (1.42 in.) |
| Stroke | 30 mm (1.18 in.) |
| Displacement | 30.5 cc (1.86 in. ³) |
| Exhaust | Spark arrester muffler or spark arrester muffler with catalyst |
| Carburetor | Diaphragm with purge pump |
| Ignition System | Flywheel magneto, capacitor discharge ignition type |
| Spark Plug | NGK CMR7H - Gap 0.6 mm (0.026 in.) |
| Fuel | Mixed (gasoline and two-stroke oil) |
| Fuel/Oil Ratio | 50 : 1 |
| Gasoline | Use 89 Octane unleaded. Do not use fuel containing methyl alcohol, more than 10% ethyl alcohol or 15% MTBE. Do not use alternative fuels such as E20 or E85. |
| Oil | ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345- FD, two-stroke, air-cooled engine oil. |
| Fuel Tank Capacity | 0.66 L (22.3 US fl. oz.) |
| Starter System | Automatic rewind starter |
| Clutch | Centrifugal type |
| Vilenation Deduction | Rubber cushion on engine mount. |
| Vibration Reduction Systems | Rubber anti-vibration grip on front and rear handle. |
| Operating Rod | 25.0 mm (1.0 in.) diameter aluminum tube |
| Drive Shaft | 6.15 mm (0.25 in.) flex shaft |

| MODEL | Т302 |
|----------------------------|---|
| Gear Case Ratio | 1.62 : 1 |
| Rotating Direction | Counterclockwise (viewed from top) |
| Cutter Head | Speed-Feed [®] 450 LH nylon line head, line capacity 7.6 m (25 ft.) or Speed-Feed [®] 500 LH nylon line head, line capacity 8.2 m (27 ft.) or HDFH (Heavy Duty Fixed Line Head) |
| Handle | Front - D-loop type with rubber anti-vibration grip. Rear - Rubber anti-vibration grip. |
| Shoulder Harness | Optional |
| Idle Speed | 2,900 RPM |
| Clutch Engagement Speed | 3,700 RPM |
| Wide Open Throttle Speed | 10,200 RPM |

PRODUCT REGISTRATION

Thank you for choosing Shindaiwa Power Equipment

Please go to http://www.shindaiwa-usa.com to register your new product on-line. It's *FAST* and *EASY*! NOTE: your information will never be sold or misused by ECHO Incorporated. Registering your purchase enables us to contact you in the unlikely event of a service update or product recall, and verifies your ownership for warranty consideration.

If you do not have access to the Internet, you can complete the form below and mail to:

ECHO Incorporated, Product Registration, PO Box 1139, Lake Zurich, IL 60047.

Confidential: Information provided will not be shared or sold

$\mathbf{ShindaiwR}^{ ilde{a}}$ product registration card $: ext{Tarjeta}$ de registro $: ext{carte}$ d'enregistrement du produit

OPTION EN LIGNE: Enregistrer en ligne et épargner un timbrel Vous serez informé sur les nouveaux produits Shindaiwa et les mises à jour de produit ainsi que les offres spéciales. Simplement visitez le: www.shindaiwa-usa.com producto y/o se le enviara información sobre los nuevos pro-ductos Shindaiwa y las ofertas especiales. Simplemente visite: **OPCIÓN POR INTERNET:** ¡Registrese en la pagina web y ahorre una estampilla! Le alertaran sobre actualizaciones del ONLINE OPTION: Register online and save a stamp! You will be alerted of product updates and/or be sent new **Shindaiwa** product information and special offers. Simply go to:

www.shindaiwa-usa.com

Please Print : Por Favor Enscriba Con Letra De Molde : En Lettre Carré S.V.P.

Address : Dirección : Adres

City: Ciudad: Ville

Purchaser's Name : Nombr

www.shindaiwa-usa.com

| e del Compr | o del Comprador : Nom de l'acheteur | acheteur | Primary use of tool: Uso primario de la h Usage principal : □ Do vou wish to recei | Primary use of tool: □Professional □ Homeowner □ Rental Equip. Use primario de la herramienta:□Profesional □ Dueño de casa □ Aquiler Usage principal: □ □Professional □ □ Residental □ □ □ Location □ Do vou insit in receive periodic Shindaiwa mondict information and special | ☐ Rental Equip. ño de casa ☐ Alquiler J Location |
|---|--|--|--|--|--|
| gg gg | | | offers by e-mail? Tyes No. ¿Desea usted recibir información per electronico sobre el producto Shinda Souhailez-vous recevoir périodique | offers by e-mail? | ciales por correo |
| | State : Estado : Province | Zip Code : Código Postal : Code Postal | Shindaiwa et les off Did you visit the Shii ☐ Yes ☐ No | Shindaiwa et les offres spéciales par courrier électronique ? ☐ Oui ☐ Non Did you visit the Shindaiwa website before purchasing your product? ☐ Yes ☐ No | ique ? 🗖 Oui 🔲 Non your product? |
| De Correo | Electrónico : Cou | De Correo Electrónico : Courrier Électronique | Visitó usted la pagin Sí No Avez-vous visité le s Oui Non | Visito usted la pagina web Shindaiwa antes de comprar su producto? □ Si □ No □ Noi le le site d'Shindaiwa avant de procurer votre produit? □ Oui □ Non | ar su producto? votre produit? |
| e Teléfono | e Teléfono : Téléphone | Date of Purchase : Fecha de la Compra : Date de l'achat | What factor(s) most i Performance Reliability | What factor(s) most influenced your purchase? Derformance Price Dealer Dealer Reliability Prior Experience Quality Frigand Family Pand | > |
| del Almacé | n donde fue Com | del Almacén donde fue Comprado : Lieu d'achat | ¿Qué factor(es) influ Euncionamiento Confabilidad | s en su compi encia Anterior | dor |
| / Modelo:N | lo. de modéle Se | Modelo: No. de modéle Serial Number : Numero de Serie : No. de série | Quel facteur (facteur Performance | influencé le p | pu |
| us to contact registrar su cc o o la revocaci us permettra d | you in the unlikely every mpra nos permite es ión del producto y ve- e vous contacter dan | us lo contact you in the unitkely event of a service update or product recall and verifies your registrar su compra nos permite estar en contacto con usted en caso de cualquier evento o la revocación del producto y verificación de propleada en caso de hoto o perdida. Is sepmettra de vues contacter dans le cas improbable de modifications des instructions | Ami/Famille | _ 8 | ω. |
| et verifier que | vous étes le propriet | aire en cas de vol ou de perte. | 2007 1 200 1 100 | www.siiiidalwa-usa.com | X7571120102 02-2012 |

Registering your purchase enables, us to contrar you in he unitiely event of a service update or prod ownership in the event of loss. Et negaters su compara note parmite state en contracto con used en come alviso de lempo de servicio o la revocación del producio y verificación de propledad en case L'emeglisment de votre achan mous permetra de vous contracte dans les case propriedades en case L'emeglisment de votre achan mous permetra de vous calcular de modific.

49 shindaiwa

Phone Number: Número

Where Purchased : Nombre

Model Number: Numero

: Direcciór

E-Mail Address

X7502352402

NOTES T302

NOTES

U80612001001 - U80612999999 U80713001001 - U80713999999



www.echo-usa.com