# **shindaiwa**®

# Operator's Manual T235 Grass Trimmer / Brushcutter

# WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

# WARNING



Read and understand all provided literature before use. Failure to do so could result in serious injury.

Note: This product complies with CAN ICES-2/NMB-2.

### TABLE OF CONTENTS

# TABLE OF CONTENTS

| Introduction                                    | . 3 |
|---|-----|
| Servicing Information                           | . 3 |
| Parts and Serial Number                         | . 3 |
| Service   |     |
| Consumer Product Support                        | . 4 |
| Product Registration                            | . 4 |
| Additional Literature                           |     |
| Safety  | . 4 |
| Manual Safety Symbols and Important Information | . 4 |
| International Symbols                           | . 5 |
| Personal Condition and Safety Equipment         | . 7 |
| Equipment                                       | 11  |
| Emission Control (Exhaust & Evaporative)        | 13  |
| CARB and EPA Emissions Control Information      | 13  |
| Description                                     | 14  |
| Contents  | 15  |
| Assembly  | 16  |
| Nylon Line Head Installation                    | 16  |
| To Advance Trimmer Line                         |     |
| Remove Nylon Line Head                          |     |
| Support Handle                                  |     |
| Operation                                       |     |
| Fuel  |     |
| Starting Cold Engine                            |     |
| Starting Warm Engine                            |     |
| Stopping Engine                                 |     |
| Applications                                    |     |
| Operating Techniques - Nylon Line Head          | 25  |
| Operating Techniques - Metal or Plastic Blade   | 25  |
| Reaction Forces                                 | 26  |
| Blade Cutting Problems                          |     |
| Maintenance                                     |     |
| Skill Levels                                    |     |
| Maintenance Intervals                           |     |
| Air Filter                                      |     |
| Fuel Filter                                     |     |
| Spark Plug                                      |     |
| Cooling System<br>Exhaust System                |     |
| Carburetor Adjustment                           |     |
| Lubrication                                     |     |
| Nylon Line Head Disassembly Instructions        |     |
| Nylon Line Replacement                          | 39  |
| Troubleshooting                                 | 41  |
| Storage   |     |
| Long Term Storage (Over 30 Days)                |     |
| Specifications                                  |     |
| Specifications                                  |     |
| Product Registration                            |     |

Shindaiwa® X7732276706 © 01/22 ECHO Incorporated

# INTRODUCTION

Specifications, descriptions and illustrative material in this literature are as accurate as known at the time of publication, but are subject to change without notice. Illustrations may include optional equipment and accessories, and may not include all standard equipment.



T235

Read and understand all provided literature. Literature contains specifications and information for safety, operation, maintenance, storage, and assembly specific to this product. Scan QR codes for more information.



For additional literature, including safety manuals where applicable, or questions regarding terms used in this manual, visit:

https://www.echo-usa.com/manuals

OR






https://www.shindaiwa-usa.com/manuals

# SERVICING INFORMATION

### Parts and Serial Number

Genuine SHINDAIWA Parts and Assemblies for your SHINDAIWA products are available only from an Authorized SHINDAIWA Dealer. When you do need to buy parts always have the Model Number and Serial Number of the unit with you. For future reference, write them in the space provided below.

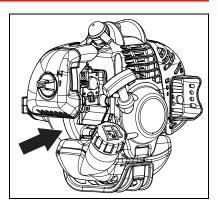

Model No. Serial No.



### Service

Service of this product during the warranty period must be performed by an Authorized SHINDAIWA Service Dealer. For the name and address of the Authorized SHINDAIWA Service Dealer nearest you, ask your retailer or call: 1-877-986-7783. Dealer information is also available on WWW.SHINDAIWA-USA.COM. When presenting your unit for Warranty service/repairs, proof of purchase is required.

### **Consumer Product Support**

If you require assistance or have questions concerning the application, operation or maintenance of this product you may call the SHINDAIWA Consumer Product Support Department at 1-877-986-7783 from 8:00 am to 5:00 pm (Central Standard Time) Monday through Friday. Before calling, please know the model and serial number of your unit.

### **Product Registration**

To ensure trouble free warranty coverage it is important that you register your SHINDAIWA equipment on-line at WWW.SHINDAIWA-USA.COM or by filling out the product registration sheet included in this manual. Registering your product confirms your warranty coverage and provides a direct link between you and ECHO if we find it necessary to contact you.

### Additional Literature

In addition to finding information online, information is available from your Authorized Shindaiwa Service Dealer, or by contacting ECHO Incorporated, 400 Oakwood Road, Lake Zurich, IL 60047, 1-800-432-ECHO (3246).

# SAFETY

### Manual Safety Symbols and Important Information

Throughout this manual and on the product itself, you will find safety alerts and helpful, informational messages preceded by symbols or key words. The following is an explanation of those symbols and key words and what they mean to you.

# 

The safety alert symbol accompanied by the word "DANGER" calls attention to an act or condition which WILL lead to serious personal injury or death if not avoided.

shindaiwa®

X7732276706 © 01/22 ECHO Incorporated



The safety alert symbol accompanied by the word "WARNING" calls attention to an act or condition which CAN lead to serious personal injury or death if not avoided.

# 

The safety alert symbol accompanied by the word "CAUTION" calls attention to an act or condition which might lead to minor or moderate personal injury if not avoided.



The enclosed message provides information necessary for the protection of the unit.

Note: This enclosed message provides tips for use, care and maintenance of the unit.



CIRCLE AND SLASH SYMBOL

This symbol means the specific action shown is prohibited. Ignoring these prohibitions can result in serious or fatal injury.

### International Symbols


| Symbol | Description                             | Symbol | Description                                      |  |
|--------|---|--------|--|--|
|        | Warning, See<br>Operator's<br>Manual    | Η      | Carburetor<br>Adjustment - High<br>Speed Mixture |  |
|        | Wear Eye, Ear<br>and Head<br>Protection | Τ      | Carburetor<br>Adjustment - Idle<br>Speed         |  |
|        | Wear Hand<br>and Foot<br>Protection     |        | Carburetor<br>Adjustment - Low<br>Speed Mixture  |  |
|        | Safety/Alert                            | STOP   | Stop   |  |

**shindaiwa**®

SAFETY

| Symbol | Description  | Symbol              | Description   |  |
|--------|--|---------------------|---|--|
|        | Hot Surface  | +0                  | Fuel and Oil<br>Mixture                                     |  |
|        | DO NOT Allow<br>Flames or Sparks<br>Near Fuel            | Ignition<br>ON<br>I | lgnition<br>ON / OFF  |  |
|        | DO NOT Smoke<br>Near Fuel                                | Þ                   | Purge Bulb  |  |
|        | Choke Control<br>"RUN" Position<br>(Choke Open)          | <b>★</b>            | Choke Control<br>"COLD START"<br>Position (Choke<br>Closed) |  |
| No ref | Keep Bystanders<br>and Helpers<br>Away 15 m<br>(50 ft.). |                     | Do not use blades.<br>String line only.                     |  |
|        | Beware Thrown<br>Objects                                 |                     | Do not use blades.<br>String line only.                     |  |

Note: Not all symbols will appear on your unit.

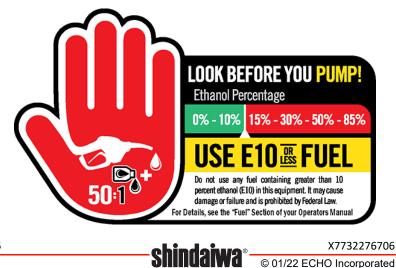

© 01/22 ECHO Incorporated

# Personal Condition and Safety Equipment



Cancer and Reproductive Harm www.P65Warnings.ca.gov





The muffler or catalytic muffler and surrounding cover may become extremely hot. Always keep clear of exhaust and muffler area, otherwise serious personal injury might occur.

# **WARNING**

Users of this product risk injury to themselves and others if the unit is used improperly and/or safety precautions are not followed. Proper clothing and safety gear must be worn when operating unit.

#### **Physical Condition**

Your judgment and physical dexterity may not be good:

- If you are tired or sick
- · If you are taking medication
- · If you have taken alcohol or drugs

Operate unit only if you are physically and mentally well.

#### Eye Protection

# WARNING

- Eye protection that meets ANSI Z87.1 or CE requirements must be worn whenever you operate the unit.
- For additional safety, a full-face shield can be worn over safety glasses or goggles to provide protection from sharp branches or flying debris.

#### Hand Protection

Wear sturdy, no-slip, rubber work gloves to improve your grip on the handles. Gloves also provide protection against cuts and scratches, cold environments, and reduce the transmission of machine vibration to your hands.

#### **Hearing and Ear Protection**

ECHO recommends wearing personal protective equipment whenever unit is used.

#### **Breathing Protection**

Operators who are sensitive to dust or other common airborne allergens may need to wear a dust mask to prevent inhaling these materials while operating unit. Dust masks can provide protection against dust, plant debris, and other plant matter such as pollen. Make sure the mask does not impair your vision, and replace the mask as needed to prevent air restrictions.

#### **Proper Clothing**

Wear snug-fitting, durable clothing:

- · Pants should have long legs, shirts should have long sleeves.
- · DO NOT WEAR SHORTS.
- DO NOT WEAR TIES, SCARVES, JEWELRY, or clothing with loose or hanging items that could become entangled in moving parts or surrounding growth.
- · Keep clothing buttoned or zipped, and keep shirt tails tucked in.
- · Wear sturdy work shoes with nonskid rubber soles.
- DO NOT WEAR OPEN TOED SHOES.
- DO NOT OPERATE UNIT WITH BARE FEET.

Keep long hair away from engine and air intake. Retain hair with cap or net.

Heavy protective clothing can increase operator fatigue, which may lead to heat stroke. Schedule heavy work for early morning or late afternoon hours when temperatures are cooler.

# A WARNING

The components of this machine generate an electromagnetic field during operation, which can interfere with some pacemakers. Reduce the risk of serious or fatal injury, persons with pacemakers should consult with their physician and the pacemaker manufacturer before operating this machine. In the absence of such information, ECHO <u>does not recommend</u> the use of this machine by anyone who has a pacemaker.

#### **Extended Operation and Extreme Conditions**

# **A**CAUTION

Prolonged exposure to cold and/or vibration can result in injury. Read and follow all safety and operation instructions to minimize risk of injury. Failure to follow instructions can result in painful wrist/hand/arm injuries.

It is believed that a condition called Raynaud's Phenomenon, which affects the fingers of certain individuals, may be brought about by exposure to vibration and cold. Exposure to vibration and cold may cause tingling and burning sensations, followed by loss of color and numbness in the fingers. The following precautions are strongly recommended, because the minimum exposure, which might trigger the ailment, is unknown.

- Keep your body warm, especially the head, neck, feet, ankles, hands, and wrists.
- Maintain good blood circulation by performing vigorous arm exercises during frequent work breaks, and also by not smoking.
- Limit the hours of operation. Try to fill each day with jobs where operating the unit or other hand-held power equipment is not required.
- If you experience discomfort, redness, and swelling of the fingers followed by whitening and loss of feeling, consult your physician before further exposing yourself to cold and vibration.

### **Repetitive Stress Injuries (RSI)**


It is believed that overusing the muscles and tendons of the fingers, hands, arms, and shoulders may cause soreness, swelling, numbness, weakness, and extreme pain in those areas. Certain repetitive hand activities may put you at a high risk for developing a Repetitive Stress Injury (RSI). An extreme RSI condition is Carpal Tunnel Syndrome (CTS), which could occur when your wrist swells and squeezes a vital nerve that runs through the area. Some believe that prolonged exposure to vibration may contribute to CTS. CTS can cause severe pain for months or even years.

shindaiwa

X7732276706

To reduce the risk of RSI/CTS, do the following

- · Avoid using your wrist in a bent, extended, or twisted position. Instead try to maintain a straight wrist position. Also, when grasping, use your whole hand, not just the thumb and index finger.
- · Take periodic breaks to minimize repetition and rest your hands.
- · Reduce the speed and force with which you do the repetitive movement.
- · Do exercises to strengthen the hand and arm muscles.

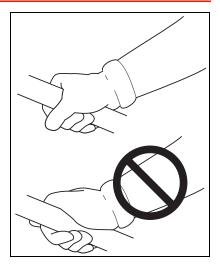

 Immediately stop using all power equipment and consult a doctor if you feel tingling, numbness, or pain in the fingers, hands, wrists, or arms. The sooner RSI/CTS is diagnosed, the more likely permanent nerve and muscle damage can be prevented.

All over head electrical conductors and communications wires can have electricity flow with high voltages. This unit is not insulated against electrical current. Never touch wires directly or indirectly, otherwise serious injury or death can result.


Do not operate this product indoors or in inadequately ventilated areas. Engine exhaust contains poisonous emissions and can cause serious injury or death.

#### Read Manuals

 Provide all users of this equipment with literature for instructions on safe operation.

#### **Clear the Work Area**

· Always clear the work area of foreign objects such as rocks, broken glass, nails, wire, or string, and check for any hidden hazards. Spectators and fellow workers must be warned, and children and animals prevented from coming nearer than 50 ft. (15 m) while the unit is in use.

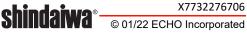

X7732276706

- Outside the 50 ft. (15 m) zone, there is still a risk of injury from thrown objects.
- Bystanders should be encouraged to wear eye protection.
- · If you are approached, stop the engine and cutting attachment.
- When a bladed unit is used, there is the added risk of injury to bystanders being struck with the moving blade in the event of a blade thrust or other unexpected reaction of the blade.

#### Keep a Firm Grip

• Always hold throttle handle and support handle with thumbs and fingers tightly encircling the handles.

#### Keep a Solid Stance

- Maintain footing and balance at all times. Do not stand on slippery, uneven or unstable surfaces. Do not work in odd positions or on ladders. Do not over reach.
- · Keep cutting attachment below waist.
- · Keep all body parts away from rotating cutting attachment.

#### Avoid Hot Surfaces

• Keep exhaust area clear of flammable debris. Avoid contact during and immediately after operation.



# Equipment



Use only approved attachments. Serious injury may result from the use of a non-approved attachment combination. ECHO Incorporated will not be responsible for the failure of cutting devices, attachments or accessories which have not been tested and approved by ECHO Incorporated. Read and comply with all safety instructions.

- Do not attempt to modify this product. Serious injury can result from the use of any modified product.
- Check unit for loose or missing nuts, bolts, and screws. Tighten or replace as needed.
- Inspect shield for damage and ensure that shield is properly installed, and that the cut-off knife is securely in place. Replace if either is damaged or missing.

### SAFETY

- Check that the cutting attachment is firmly attached and in safe operating condition.
- Manufacturer recommended flexible non-metallic line is installed in the trimmer head.
- Assure that throttle trigger, throttle trigger lockout, and stop switch all work properly.
- Check that handle and harness (if included) are installed and adjusted for safe, comfortable operation. See Assembly Section for proper adjustment.

# **WARNING**

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings.

- ALWAYS stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before assembling unit, removing obstructions, clearing debris, or servicing unit.
- Do not connect spark plug lead to spark plug until unit is ready for use.
- DO NOT start or operate unit unless all guards and protective covers are properly assembled to unit.
- NEVER reach into any opening while the engine is running. Moving parts may not be visible through openings.
- Position wiring safely to prevent snagging, separation of connectors, or breakage during operation. Gather excess wire, and secure with wiring clamp if provided on equipment, or tuck behind the air filter area. Do not place wiring directly against hot engine components.
- Check wiring and connectors for nicks, cuts, exposed wire, or other damage, and repair or replace as needed. Exposed wire or connectors can cause shocks, sparks, and risk of fire or explosion, resulting in serious injury.
- Check wire terminals for secure connections.

# **WARNING**

Periodically Check fuel system (fuel lines, vent, grommet, fuel tank, and fuel cap) for leaks especially if the unit is dropped. If damage or leaks are found, do not use unit, otherwise serious personal injury or property damage may occur. Have unit repaired by an authorized servicing dealer before using.

# EMISSION CONTROL (EXHAUST & EVAPORATIVE)

# **CARB and EPA Emissions Control Information**

The emission control system for the engine is EM (engine modification) and, if the second to last character of the Engine Family on the Emission Control Information label (sample below) is "B", "C", "K", or "T", the emission control system is EM and TWC (3-way catalyst). The fuel tank/fuel



line emission control system is EVAP (evaporative emissions). Evaporative emissions for California models are only applicable to fuel tanks and fuel feed lines.

An Emission Control Label is located on the engine. (This is an EXAMPLE ONLY, information on label varies by engine FAMILY).

EMISSION CONTROL INFORMATION ENGINE FAMILY: CEHOS.0214KL DISPLACEMENT: 21.20C EMISSION COMPLIANCE PERIOD: 300Hours THIS ENGINE MEETS 2012 U.S. EPA ECHUEVP & CALIFORNIA EXH EVP EMISSION REGULATIONS FOR S.O.R.E. REFER TO OWNER'S MANUAL FOR MAINTENANCE SPECIFICATIONS AND ADJUSTMENTS. YAMABIKO CORP. MMM/YYYYY

#### Product Emission Durability (Emission Compliance Period)

The 50 or 300 hour emission compliance period is the time span selected by the manufacturer certifying the engine emissions output meets applicable emissions regulations, provided that approved maintenance procedures are followed as listed in the Maintenance Section of this manual.

Locate the safety decal(s) on your unit. Make sure the decal(s) is legible and that you understand and follow the instructions on it. If a decal cannot be read, a new one can be ordered from your SHINDAIWA dealer. The safety decal is for example only. Your label may appear slightly different.



- 1. Spark Plug
- 2. Top Guard
- 3. Spark Arrestor Muffler or Spark Arrestor Muffler with Catalyst
- 4. Fuel Tank
- 5. Fuel Tank Guard
- 6. Fuel Tank Cap
- 7. Recoil Starter Handle
- 8. Choke
- 9. Air Filter
- 10. Purge Bulb
- 11. Nylon Cutter Head
- 12. Drive Shaft Assembly
- 13. Support Handle For Left Hand
- 14. Stop Switch
- 15. Throttle Trigger Lockout
- 16. Throttle Handle For Right Hand
- 17. Power Head
- 18. Throttle Trigger
- 19. Debris Shield with Cut-off Knife
- 20. Cut-off Knife

# CONTENTS

The SHINDAIWA product you purchased has been factory pre-assembled for your convenience. Due to packaging restrictions, some assembly may be necessary.

After opening the carton, check for damage. Immediately notify your retailer or SHINDAIWA Dealer of damaged or missing parts. Use the contents list to check for missing parts.

- 1 Power Head / Drive Shaft Assembly
- 1 Operator's Manual
- 1 Warranty Statement

# ASSEMBLY


### Nylon Line Head Installation

Parts Required: Nylon Line Head




#### Wear Gloves or personal injury may result:

- Cutoff knife is sharp.
- Gearcase and surrounding area may be hot.
- 1. Be sure adapter plate (C) remains on PTO shaft (A).
- 2. Align locking hole in upper plate with notch in edge of gear housing and insert head locking tool (D).

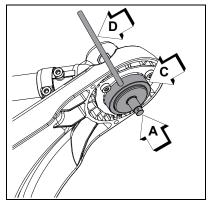

- 3. Thread line head (E) onto shaft by turning it counterclockwise until head is tight against adapter plate (C).
- 4. Remove locking tool (D).

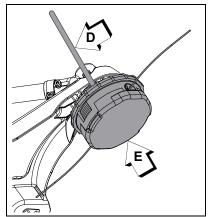

# NOTICE

Semi-automatic nylon line heads must be used only with debris shield with cut-off knife. Using nylon line heads with debris shield without cutoff knife can result in trimmer damage, caused by operation with excessive line length.

Note: Your nylon line head may appear different than nylon line head shown.

# To Advance Trimmer Line


See Maintenance Section for nylon line replacement.

Note: To advance trimmer line, tap trimmer head against the ground while the head is turning at normal operating speed.

# **Remove Nylon Line Head**

Note: Do not disassemble nylon line head.


- Align locking hole in upper plate with notch in edge of gear housing and insert head locking tool (D).
- Remove line head (E) by turning it clockwise until head is completely off of shaft.
- 3. Remove locking tool (D).

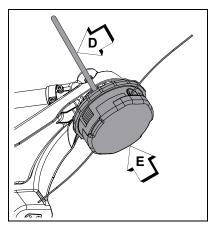

# Support Handle

Note: Label shows minimum spacing for support handle location.

 If necessary, position support handle for comfortable operation and securely tighten screws.

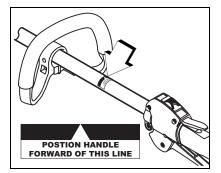

# WARNING

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings. Always stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit.

# **WARNING**

Engine exhaust IS HOT, and contains Carbon Monoxide (CO), a poison gas. Breathing CO can cause unconsciousness, serious injury, or death. Exhaust can cause serious burns. ALWAYS position unit so that exhaust is directed away from your face and body.

# **WARNING**

Operation of this equipment may create sparks that can start fires around dry vegetation. This unit is equipped with a spark arrestor to prevent discharge of hot particles from the engine. Metal cutters can also create sparks if the cutter strikes rocks, metal, or other hard objects. Contact local fire authorities for laws or regulations regarding fire prevention requirements.

#### Fuel

# WARNING

Diesel fuels and alternative fuels, such as E15 (15% ethanol), E85 (85% ethanol) or any fuels not meeting Shindaiwa requirements are NOT approved for use in Shindaiwa 2-stroke or Hybrid 4-stroke gasoline engines. Use of diesel or alternative fuels may cause performance problems, loss of power, overheating, fuel vapor lock, and unintended machine operation, including, but not limited to, improper clutch engagement. Diesel or alternative fuels may also cause premature deterioration of fuel lines, gaskets, carburetors and other engine components.

#### **Fuel Requirements**

**Gasoline** - Use fresh (purchased within the last 30 days from the pump) 89 Octane [R+M/2] (mid grade or higher) gasoline known to be good quality. Gasoline may contain up to 10% Ethanol (grain alcohol) or 15% MTBE (methyl tertiary-butyl ether). Gasoline containing methanol (wood alcohol) is **NOT** approved. Use of ECHO branded fuel is recommended to extend engine life in all air-cooled 2-stroke and 2/4-stroke hybrid engines.

**Two Stroke Oil** - A 2-stroke engine oil, such as Shindaiwa branded 2-stroke oils, meeting ISO-L-EGD (ISO/CD 13738) and J.A.S.O. FD Standards must be used. Shindaiwa branded 2-stroke oils meet these standards. Engine problems due to inadequate lubrication caused by failure to use an ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345-FD certified oil will void the 2-stroke engine warranty.

# WARNING

2-Stroke engine oil contains petroleum distillates and other additives that may be harmful if swallowed. Heated oil can release vapors that can cause flash fire, or ignite with explosive force. Read and follow the oil manufacturer's instructions, and observe all safety warnings and precautions for handling flammable liquids. For more detailed safety and first aid information, visit www.echo-usa.com for a copy of the Material Safety Data Sheet.

- KEEP OUT OF REACH OF CHILDREN.
- If swallowed, do not induce vomiting. CALL PHYSICIAN OR A POISON CONTROL CENTER IMMEDIATELY.
- WEAR SAFETY GLASSES when mixing or handling.
- AVOID repeated or prolonged skin contact.
- AVOID inhaling oil mists or vapors.

# NOTICE

Shindaiwa branded 2-stroke oils may be mixed at 50:1 ratio for application in all Shindaiwa engines sold in the past, regardless of ratio specified in those manuals.

Handling Fuel



Fuel is VERY flammable. Use extreme care when mixing, storing or handling, or serious personal injury may result.

X7732276706 © 01/22 ECHO Incorporated



- Use an approved fuel container.
- DO NOT smoke near fuel.
- DO NOT allow flames or sparks near fuel.
- Fuel tanks/cans may be under pressure. Always loosen fuel caps slowly allowing pressure to equalize.
- NEVER refuel a unit when the engine is HOT or RUNNING!
- DO NOT fill fuel tanks indoors. ALWAYS fill fuel tanks outdoors over bare ground.
- DO NOT overfill fuel tank. Wipe up spills immediately.
- Securely tighten fuel tank cap and close fuel container after refueling.
- Inspect for fuel leakage. If fuel leakage is found, do not start or operate unit until leakage is repaired.
- Move at least 3 m (10 ft.) from refueling location before starting the engine.

# **DANGER**

Gasoline vapor is heavier than air, and can travel along the ground to nearby sources of ignition such as electrical motors, pilot lights, and hot or running engines. Vapors ignited by an ignition source can flash back to the fuel container, resulting in an explosion, fire, serious or fatal injuries, and extensive property damage.

#### Mixing Instructions

- 1. Fill an approved fuel container with half of the required amount of gasoline.
- 2. Add the proper amount of engine oil to gasoline.
- Close container and shake to mix oil with gasoline.
- 4. Add remaining gasoline, close fuel container, and remix.

| Fuel to Oil Mix – 50:1 Ratio |         |        |     |  |
|------------------------------|---------|--------|-----|--|
| US                           |         | Metric |     |  |
| Gas                          | Oil     | Gas    | Oil |  |
| gal.                         | fl. oz. | L      | СС  |  |
| 1                            | 2.6     | 5      | 100 |  |
| 2                            | 5.2     | 10     | 200 |  |
| 5                            | 13      | 25     | 500 |  |

# NOTICE

Spilled fuel is a leading cause of hydrocarbon emissions. Some states may require the use of automatic fuel shut-off containers to reduce fuel spillage.

shindajwa<sup>®</sup>

X7732276706

### T235

#### After use

• Empty the fuel tank prior to storing the unit. Return unused fuel to an approved fuel storage container.

**Storage** - Fuel storage laws vary by locality. Contact your local government for the laws affecting your area. As a precaution, store fuel in an approved, airtight container. Store in a well-ventilated, unoccupied building, away from sparks and flames.

# NOTICE

Stored fuel ages. Do not mix more fuel than you expect to use in thirty (30) days, ninety (90) days when a fuel stabilizer is added.

# NOTICE

Stored 2-stroke fuel may separate. ALWAYS shake fuel container thoroughly before each use.

# NOTICE

Used oil and gasoline, and soiled towels are hazardous waste materials. Disposal laws vary by locality.


### Starting Cold Engine



The attachment will operate immediately when the engine starts, and could result in possible serious injury. Keep movable parts of the attachment away from objects that could become entangled or thrown, and surfaces that could cause loss of control.

1. Stop Switch

Move stop switch (A) forward, away from the STOP position.

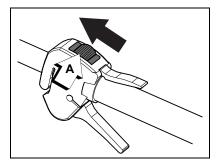




## OPERATION

2. Choke

Move choke (B) to COLD START (|---|) (CLOSED) position.


3. Purge Bulb

Pump purge bulb (C) until fuel is visible and flows freely in the clear fuel tank return line. Pump bulb an additional 4 or 5 times.

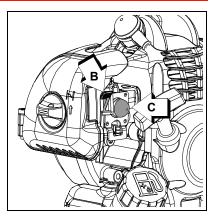

4. Recoil Starter

Lay the unit on a flat area and keep movable attachment parts clear of all obstacles. Firmly grasp throttle handle and throttle trigger lockout with left hand and fully depress throttle trigger to wide open position. Rapidly pull recoil starter handle/rope (D) until engine fires (or maximum 2-3 pulls).

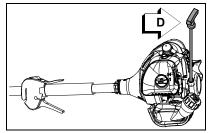

5. Choke

After engine fires (or 2-3 pulls), move choke (B) to the RUN (|+|) (OPEN) position. Firmly grasp throttle handle and throttle trigger lockout with left hand and fully depress throttle trigger to wide open position. Pull starter handle/rope until engine starts and runs. Release throttle trigger and allow unit to warm up at idle for several minutes.

Note: If engine does not start with choke in "Run" position after 2-3 pulls, repeat instructions 2 - 5.

6. Throttle Trigger

After engine warm-up, grip throttle handle and support handle. Depress the throttle trigger lockout, and gradually depress throttle trigger to increase engine RPM to operating speed.

# **Starting Warm Engine**

The starting procedure is the same as Cold Start except DO NOT close the choke, and do not hold throttle trigger fully depressed.




# The attachment should not move at idle, otherwise serious personal injury may result.

Note: If attachment moves, readjust carburetor according to "Carburetor Adjustment" instructions in this manual or see your Dealer.


1. Stop Switch

Move stop switch (A) forward, away from the STOP position.

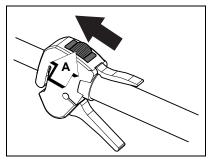

2. Purge Bulb


Pump purge bulb (C) until fuel is visible and flows freely in the clear fuel tank return line. Pump bulb an additional 4 or 5 times.

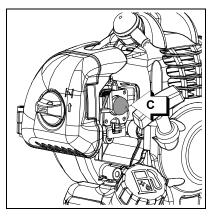

# OPERATION

3. Recoil Starter

Lay the unit on a flat area and keep movable attachment parts clear of all obstacles. Firmly grip throttle handle and throttle trigger lockout with left hand. Rapidly pull recoil starter handle/rope (D) until engine fires.

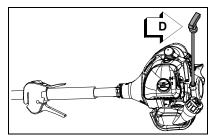

Note: If engine does not start after 2-3 pulls, use Cold Start Procedure.


# Stopping Engine

1. Throttle

Release throttle trigger and allow engine to return to idle before shutting off engine.

2. Stop Switch

Move stop switch (A) rearward, to STOP position.

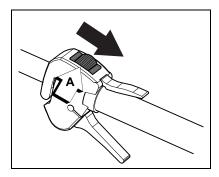



*If engine does not stop when stop switch is moved to STOP position, close choke - COLD START position - to stall engine. Have your dealer repair stop switch before using unit again.* 

# Applications



Do Not install blades on GT (Curved Shaft) trimmers.

T235

Shindaiwa® X7732276706 © 01/22 ECHO Incorporated

### **Operating Techniques - Nylon Line Head**

Nylon line heads may be used for trimming, scything, edging, and scalping of grass and light weeds.

#### Trimming

Feed the spinning line into the material to be cut. Tilt the line head to one side to direct cutting debris away from you:

- Model SRM/PAS/SB/TX/C/T (Straight shaft, counter-clockwise line head rotation) - Tilt the cutting head down on the right side (muffler side) while cutting to direct cutting debris away from operator. Feed the line gradually into the material you wish to cut, avoiding contact with fences or other barriers.
- GT models: Tilt cutting head to the left while cutting to direct debris away from the operator.

#### Scything

Scything - Swing the cutting head in a level arc, gradually feeding the line into the material being cut. Move forward with each arc to cut a swath. Width of cutting swath depends on arc. Use a larger arc for a wider swath, or a smaller arc for a narrow swath. Keep line head tilted to direct cutting debris forward or away from you.

#### **Edging and Scalping**

Both of these are done with the nylon line cutting head tilted at a steep angle. Scalping is removing top growth, leaving the earth bare. Edging is trimming the grass back where it has spread over a pavement or driveway. During both edging and scalping, hold the unit at a steep angle in a position where the debris, and any dislodged dirt and stone, will not come back towards you even if it ricochets off the hard surface.

#### General

- Debris flows in direction of line head rotation. Change line head position to assure debris flow is directed away from operator.
- · Keep cutting line away from wire fences to avoid entanglement.
- · Operate trimmer only with cutting head below knee height.


### **Operating Techniques - Metal or Plastic Blade**

Brush cutter blades may be used to cut and trim a wide variety of materials. Refer to the blade selection section for determining the correct blade for the application.

### OPERATION

#### Scything (3, 8, and 80 tooth weed/grass, and brush blades)

- · To cut large sections of field grass and weeds swing the cutting head in a level arc, gradually feeding the blade into the material being cut. Adjust throttle speed according to your work.
- Do not swing the main pipe with arms. Turn hips to swing the blade horizontally from right to left, and cut weeds on the left side of the blade.
- · Do not scythe back and forth as the grass may scatter and kickback may occur easily.
- Tilt blade left by 5 to 10 degrees so that cut grasses will push left, making progress easier.
- Move forward with each arc to cut a swath.
- Width of cutting swath depends on arc. Use a larger arc for a wider swath, or a smaller arc for a narrow swath. Suggested cutting width is about 1.5 m (4.9 ft).
- · When scything large brush up to 0.5" diameter from right to left, avoid cutting with highlighted section.

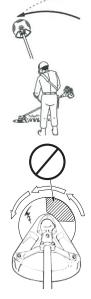

. -7

### **Reaction Forces**



- The cutting attachment will continue to rotate even after the throttle is released, maintain control of the unit until it has come to a complete stop.
- Blade thrust may occur when the spinning blade contacts an object that it does not immediately cut. Following proper cutting techniques will prevent blade thrust.
- Blade thrust can be violent enough to cause the unit and/or operator to be propelled in any direction, and possibly lose control of the unit.
- Blade thrust can occur without warning if the blade snags, stalls or binds.
- Blade thrust is more likely to occur in areas where it is difficult to see the material being cut.

#### Push or Pull - Kickout

During normal use, operating a brushcutter with a circular metal blade can produce sudden strong reaction forces that are difficult to control. Strong reaction forces can cause a loss of balance or loss of control of the equipment, resulting in serious injury to operator and bystanders.

Understanding what causes these reactive forces may help you to avoid them, and can help you to maintain control of the equipment if you experience a sudden reaction during cutting. Reactive forces occur when the force being applied by the cutting teeth of a blade meet resistance, and some of the cutting force is directed back toward the equipment. The greater the cutting force or the amount of resistance, the greater the reactive force.

#### **Push and Pull Forces**

Push and pull forces are reactive forces that push the equipment directly toward the operator, or that pull the equipment directly away from the operator. These forces are the result of cutting on the sides of the blade. The direction of the force depends on the side of the blade being used, and the direction of blade rotation at the point of contact. The reactive force is in the opposite direction of blade rotation at the contact point, regardless of where the contact is being made. These types of reactive forces are also called "Blade Thrust."

As shown in the illustration, a blade turning counterclockwise will cause the equipment to pull away from the operator if the point of cutting resistance is on the left side of the blade. If the point of cutting resistance is on the right side of the blade, the equipment will push back toward the operator. In both examples, the reactive force is in the opposite direction of blade rotation at the contact point where resistance occurs.

#### Kickout

Kickout is also a reactive force caused by resistance to cutting, but the direction of blade thrust is lateral (to the left or right of the blade), instead of forward or back toward the operator. In most cases, Push, Pull, and Kickout can be reduced or eliminated by:

- Using the correct blade for the cutting job
- · Using properly sharpened blades










### OPERATION

- Applying consistent, even force to the blade during the cut
- · Avoiding obstacles and ground hazards
- Using extra care when cutting harder materials such as extremely dry brush, saplings, and small trees
- · Cutting from a stable, secure position

# **Blade Cutting Problems**

Binding - Blades may bind in the cut if dull or forced. Binding can damage blade, and result in blade breakage or injury from fragments and flying debris. If a blade binds in a cut, don't try to get it out by applying "up and down" force to pry the cut open. Applying prying force to the blade can bend the blade, and result in blade failure and injury.

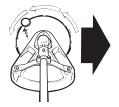



To free a blade that is bound in the cut, stop the engine, and support the trimmer or brushcutter to keep stress off the blade. Push the tree away from the entry point of the cut to open the cut, and pull the blade directly away from the cut in a straight-line motion. Use caution when releasing the tree to avoid being struck by spring-back or falling.

Inspect the blade for damage before proceeding. Sharpen teeth if dull, or replace blade if cracked, bent, missing teeth, or otherwise damaged.

To prevent binding:

- · Keep blades sharp
- · Avoid excessive pressure during cuts
- · Don't exceed cutting capacity of blade
- · Don't use blades with damaged or missing cutting teeth
- · Don't rock blades in cut

# WARNING

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings. Always stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit. Allow unit to cool before performing service. Wear gloves to protect hands from sharp edges and hot surfaces.

# WARNING

Operating a poorly maintained unit can result in serious injuries to operator or bystanders. Always follow all maintenance instructions as written, otherwise serious personal injury can result.

Your unit is designed to provide many hours of trouble free service. Regular scheduled maintenance will help your unit achieve that goal. If you are unsure or are not equipped with the necessary tools, we recommend that you take your unit to a Servicing Dealer for maintenance. To help you decide whether you want to DO-IT-YOURSELF or have the Dealer do it, each maintenance task has been graded. If the task is not listed, see your Dealer for repairs.

# NOTICE

The use of emission control components other than those specifically designed for this unit is a violation of federal law.

### Skill Levels

**Level 1** = Easy to do. Common tools may be required.

Level 2 = Moderate difficulty. Some specialized tools may be required.

Level 3 = See your dealer.

Click HERE or go to http://www.echo-usa.com/products/maintenance-kit

or

HERE https://www.shindaiwa-usa.com/you-can.aspx

### Maintenance Intervals

| COMPONENT OR SYSTEM             | MAINTENANCE<br>PROCEDURE | SKILL<br>LEVEL |  |
|---------------------------------|--------------------------|----------------|--|
| Daily or Before Use             |                          |                |  |
| Air Filter                      | Inspect/Clean*           | 1              |  |
| Choke Shutter                   | Inspect/Clean*           | 1              |  |
| Fuel System                     | Inspect <sup>3</sup>     | 1              |  |
| Cooling System                  | Inspect/Clean            | 2              |  |
| Recoil Starter Rope             | Inspect/Clean *          | 1              |  |
| Screws/Nuts/Bolts               | Inspect/Tighten/Replace* | 1              |  |
| Every Refuel                    |                          |                |  |
| Fuel System                     | Inspect <sup>3</sup>     | 1              |  |
| 3 Months                        |                          |                |  |
| Air Filter                      | Replace*                 | 1              |  |
| Fuel Filter                     | Inspect*                 | 1              |  |
| Fuel Cap Gasket                 | Inspect*                 | 1              |  |
| Spark Plug                      | Inspect/Clean/Replace*   | 1              |  |
| Muffler Spark Arrestor          | Inspect/Clean/Replace*   | 2              |  |
| Cylinder Exhaust Port           | Inspect/Clean/De-carbon  | 2              |  |
| Drive Shaft (Flex Cable Models) | Grease <sup>1</sup>      | 2              |  |
| Gear Housing                    | Grease <sup>2</sup>      | 2              |  |
| Yearly                          |                          |                |  |
| Fuel Filter                     | Inspect/Replace*         | 1              |  |
| Fuel Cap Gasket                 | Replace*                 | 1              |  |

IMPORTANT NOTE - Time intervals shown are maximum. Actual use and your experience will determine the frequency of required maintenance.

#### MAINTENANCE PROCEDURE NOTES:

- <sup>1</sup> Apply lithium based grease every 25 hours of use.
- <sup>2</sup> Apply lithium based grease every 50 hours of use.
- <sup>3</sup> Low evaporative fuel tanks DO NOT require regular maintenance to maintain emission integrity.

\* Replacement is recommended based on the finding of damage or wear during inspection.

X7732276706


### T235

### Air Filter

#### Level 1.

Parts Required: Tune-Up Kit.

- 1. Close choke (COLD START [[-]] position). This prevents dirt from entering the carburetor throat when the air filter is removed. Brush accumulated dirt from air cleaner area.
- 2. Remove air filter cover. Brush dirt from inside cover.
- Remove foam pre-filter (B) and air filter (C) and clean as indicated below:
- 4. Foam Pre-filter.
  - Clean foam filter in water/ detergent solution and rinse with clean water.

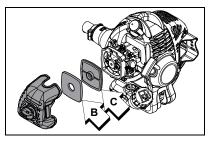

• Wrap the filter in a clean, dry cloth and squeeze (do not wring) dry. Allow to dry completely before reuse. Do not oil.

Air Filter

- Lightly brush debris from filter. Replace filter if it is damaged, fuel soaked, very dirty, or the rubber sealing edges are deformed.
- 5. Assemble components in reverse order.

### **Fuel Filter**

#### Level 1.

Parts Required: Tune-Up Kit.



Fuel is VERY flammable. Use extreme care when mixing, storing or handling, or serious personal injury may result.

1. Use a clean rag to remove loose dirt from around fuel cap and empty fuel tank.



# NOTICE

Do not damage fuel line while removing fuel filter from tank or line.

- 2. Pull the fuel filter from the tank.
- 3. Do not remove the wire coil clamp to remove the fuel filter. Pinch the fuel filter with the fingers on one hand and the fuel line with the other hand. Pull and twist slightly to separate.
- 4. Install the new filter with the reverse action.

Note: Federal EPA regulations require all model year 2012 and later gasoline powered engines produced for sale in the United States to be equipped with a special low permeation fuel supply hose between the carburetor and fuel tank. When servicing model year 2012 and later equipment, only fuel supply hoses certified by EPA can be used to replace the original equipment supply hose. Fines up to \$37,500 may be enforced for using an un-certified replacement part.

### Spark Plug


#### Level 2.

Parts Required: Tune-Up Kit.



Use only NGK BPMR8Y spark plug otherwise severe engine damage may occur.

- 1. Remove spark plug and check for fouling, worn and rounded center electrode.
- Clean the plug or replace with a new one. DO NOT sand blast to clean. Remaining sand will damage engine.
- 3. Adjust spark plug gap by bending outer electrode.

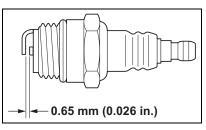

4. Tighten spark plug to 150-170 kgf•cm (130-150 lbf•in).

### **Cooling System**


Level 2.

# NOTICE

To maintain proper engine operating temperatures, cooling air must pass freely through the cylinder fin area. This flow of air carries combustion heat away from the engine.


Overheating and engine seizure can occur when:

- Air intakes are blocked, preventing cooling air from reaching the cylinder.
- Dust and grass build up on the outside of the cylinder. This build up insulates the engine and prevents the heat from leaving.

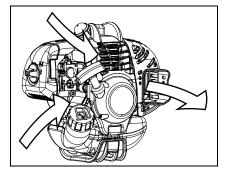

Removal of cooling passage blockages or cleaning of cooling fins is considered "Normal Maintenance." Any failure attributed to lack of maintenance is not warranted.


- 1. Remove spark plug lead.
- 2. Close choke (COLD START [-] position). This prevents dirt from entering the carburetor throat when the air filter is removed. Remove air cleaner cover (A).
- 3. Remove engine cover (B).

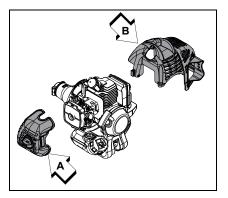

# NOTICE

DO NOT use a metal scraper to remove dirt from the cylinder fins.


- 4. Use a brush to remove dirt from the cylinder fins.
- 5. Remove ignition wires from clip for cleaning.

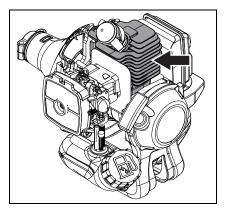

Shindaiwa® © 01/22 ECHO Incorporated

X7732276706

- Remove grass and leaves from the grid between the recoil starter and fuel tank.
- 7. Assemble components in reverse order.

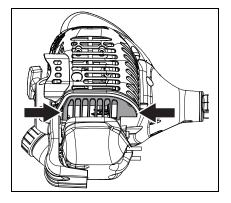

### Exhaust System

#### Spark Arrestor Screen


#### Level 2.

Parts required: Spark Arrestor Screen, Gasket(s)

- 1. Remove spark plug lead and engine cover.
- 2. Place piston at Top Dead Center (TDC) to prevent carbon/dirt from entering cylinder.
- Remove spark arrestor screen cover (C), gaskets (D), (E), and screen (F), from muffler body.
- 4. Clean carbon deposits from muffler components.

Note: When cleaning carbon deposit, be careful not to damage the catalytic element inside muffler.

 Replace screen if it is cracked, plugged, or has holes burned through.

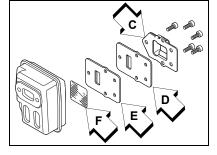

6. Assemble components in reverse order.


#### Exhaust Port Cleaning

#### Level 2.


Parts Required: Heat Shield (as required).

1. Remove spark plug lead from spark plug, and remove engine cover.

2. Place piston at top dead center. Remove muffler (A) and heat shield (B).

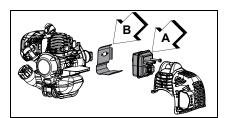

 Use a wood or plastic scraping tool to clean deposits from cylinder exhaust port (C).

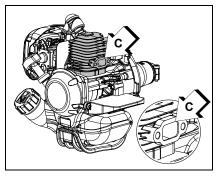

# NOTICE

Never use a metal tool to scrape carbon from the exhaust port. Do not scratch the cylinder or piston when cleaning the exhaust port. Do not allow carbon particles to enter the cylinder.


- 4. Inspect heat shield, and replace if damaged.
- 5. Install heat shield and muffler.
- 6. Tighten muffler mounting bolts (or nuts) to 90-110 kgf•cm (80-95 lbf•in).
- 7. Install engine cover and attach spark plug lead.
- 8. Start engine, and warm to operating temperature.
- 9. Stop engine, and re-tighten mounting bolts (or nuts) to specifications.

### **Carburetor Adjustment**

Level 2.

#### Engine Break-In

New engines must be operated a minimum duration of two tanks of fuel break-in before carburetor adjustments can be made. During the break-in period your engine performance will increase and exhaust emissions will stabilize. Idle speed can be adjusted as required.

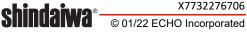

#### **High Altitude Operation**

This engine has been factory adjusted to maintain satisfactory starting and durability performance up to 330 m (1,100 ft.) above sea level (ASL) (96.0 kPa). To maintain proper engine operation and emission compliance above 330 m (1,100 ft.) ASL the carburetor <u>may</u> need to be adjusted by an authorized service dealer.


### NOTICE

*If the engine is adjusted for operation above 330 m (1,100 ft.) ASL, the carburetor must be re-adjusted when operating the engine below 330 m (1,100 ft.) ASL, otherwise severe engine damage may result.* 

Note: Every unit is run at the factory and the carburetor is set in compliance with emission regulations. Carburetor adjustments, other than idle speed, must be performed by an authorized dealer.

### WARNING

- The cutting attachment may be moving during carburetor adjustments.
- Wear your protective equipment and observe all safety instructions.
- For units equipped with a clutch, be sure the cutting attachment stops moving when the engine idles.
- When the unit is turned off, make sure the cutting attachment has stopped before the unit is set down.
- Check idle speed and reset if necessary. If a tachometer is available, idle speed screw (A) should be set to the specifications found on "Specifications" page of this manual. Turn idle screw (A) clockwise to increase idle speed; counterclockwise to decrease idle speed.

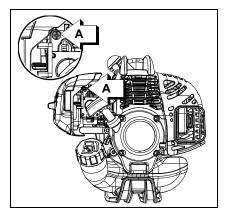

#### MAINTENANCE

#### T235

### WARNING

## When carburetor adjustment is completed, the cutting attachment should not move at idle, otherwise serious personal injury may result.

#### Lubrication

#### Level 1.


Parts Required: Lithium Based Grease.

#### Gear Case

### NOTICE


#### Gear cases without grease plug (A) do not require lubrication.

- 1. Clean all loose debris from gear case.
- 2. Remove plug (A) and check level of grease.
- Add grease if necessary. DO NOT over-fill.

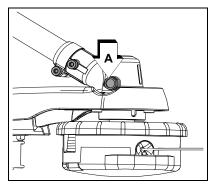


#### Drive Shaft (flex cable only)

1. Loosen screw (B) and remove locating screw (C). Pull gear case and shield from drive shaft housing.

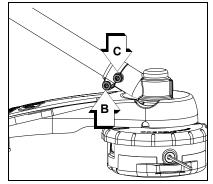

### MAINTENANCE


- T235
- Pull flexible cable (D) from the drive shaft housing, wipe clean and re-coat with 15 ml (0.5 oz.) of grease.
- Slide the flexible cable (D) back in the drive housing. DO NOT get dirt on the flex cable.
- 4. Install the gear housing and shield assembly.

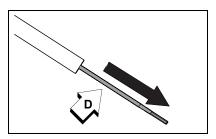

### Nylon Line Head Disassembly Instructions

Note: For normal use, Speed Feed  $^{\textcircled{R}}$  head disassembly is not necessary. However, if circumstances require disassembly, follow these instructions.

- Press top of locking tabs (A) on both sides of Speed Feed<sup>®</sup> head to release cover (B) from eyelet carrier (C).
- 2. Remove cover from eyelet carrier.

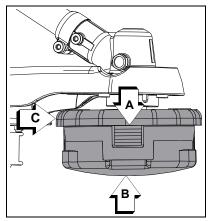

#### Nylon Line Replacement



Wear gloves or personal injury may result:

- Cutoff knife is sharp.
- Gearcase and surrounding area may be hot.




Never use wire or wire-rope that can break off and become a dangerous "projectile". Serious injury can occur.


### MAINTENANCE

T235

- Cut one piece of line to recommended length.
  2.0 mm (0.080 in.) diameter 6 m (20 ft.).
  2.4 mm (0.095 in.) diameter 6 m (20 ft.).
- 2. Align arrows on top of knob with openings in eyelets.

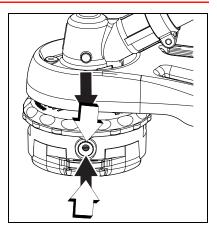


 Insert one end of trimmer line into an eyelet, and push line equal distance through trimmer head.

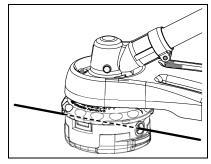

 Hold trimmer head while turning knob clockwise to wind line onto spool until about 13 cm (5 in.) of each line remains exposed.


Trimmer head is now fully loaded and ready for operation.

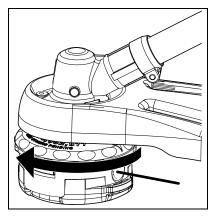

### T235

### NOTICE

When the wear indicators located at the bottom of the Speed-Feed® head are worn smooth, or if holes appear, replacement of the cover or the entire Speed-Feed® head is required.

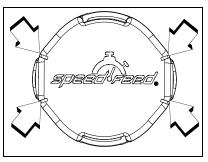

### TROUBLESHOOTING

| E                           |                    | BLEM TROU             | BLESHOOTING  | CHART   |
|-----------------------------|--------------------|-----------------------|--|---|
| Problem                     | Check              | Status                | Cause  | Remedy  |
|                             | Fuel at carburetor | No fuel at carburetor | Fuel strainer or<br>fuel line<br>obstructed  | Clean or replace<br>See your dealer                             |
|                             |                    | No fuel at cylinder   | Carburetor   | See your dealer   |
|                             |                    |                       |  | OPEN choke  |
| Engine<br>starts            | Fuel at cylinder   | Muffler wet           | Fuel mixture   | Clean or replace<br>air filter                                  |
| hard<br>or                  |                    | with fuel             | too rich   | Adjust<br>carburetor  |
| Engine                      |                    |                       |  | See your dealer   |
| Engine<br>does not<br>start | Spark at<br>end of |                       | STOP switch<br>OFF - Electrical  | Turn switch to<br>ON  |
|                             | plug wire          |                       | problem - Inter-<br>lock switch  | See your dealer   |
|                             | Spark at<br>plug   | No spark              | Incorrect gap -<br>Covered with<br>carbon -<br>Fouled with<br>fuel - Plug<br>defective | Adjust to<br>0.65 mm<br>(0.026 in.)<br>Clean or replace<br>plug |

shindaiwa

### TROUBLESHOOTING

| E   |                             | BLEM TROU                                | BLESHOOTING  | CHART                          |
|---|-----------------------------|--|--|--------------------------------|
| Problem   | Check                       | Status                                   | Cause  | Remedy                         |
| Engine<br>runs, but                               | Air filter                  | Air filter<br>dirty                      | Normal wear  | Clean or replace               |
| dies<br>or  | Fuel filter                 | Fuel filter<br>dirty                     | Contaminants<br>or residue in<br>fuel                  | Replace filter or replace fuel |
| Engine<br>does not<br>acceler-<br>ate<br>properly | Fuel vent                   | Fuel vent<br>plugged                     | Contaminated fuel                                      | Clean or replace               |
| Engine  | Spark plug                  | Plug dirty<br>or worn                    | Normal wear  | Clean and adjust or replace    |
| runs, but<br>dies                                 | Carburetor                  | Improper<br>adjustment                   | Vibration  | Adjust                         |
| or<br>Engine<br>does not                          | Cooling<br>system           | Cooling<br>system<br>dirty or<br>plugged | Extended oper-<br>ation in dirty or<br>dusty locations | Clean                          |
| acceler-<br>ate<br>properly                       | Spark<br>arrestor<br>screen | Spark<br>arrestor<br>screen<br>plugged   | Normal wear  | Replace                        |
| Engine<br>does not<br>crank                       | N                           | I/A                                      | Internal engine<br>problem                             | See your dealer                |

### A DANGER

Fuel vapors are extremely flammable and can cause fire and/or explosion. Never test for ignition spark by grounding spark plug near cylinder plug hole, otherwise serious personal injury can result.

### STORAGE

### **WARNING**

During operation the muffler or catalytic muffler and surrounding cover become hot. Always keep exhaust area clear of flammable debris during transportation or when storing, otherwise serious property damage or personal injury may result.

### Long Term Storage (Over 30 Days)

Do not store your unit for a prolonged period of time (30 days or longer) without performing protective storage maintenance which includes the following:

1. Store unit in a dry, dust free place, out of the reach of children.

### A DANGER

### Do not store in enclosure where fuel fumes may accumulate or reach an open flame or spark.

- 2. Place the stop switch in the "OFF" position.
- 3. Remove accumulation of grease, oil, dirt and debris from exterior of unit.
- 4. Perform all periodic lubrication and services that are required.
- 5. Tighten all the screws and nuts.
- 6. Drain fuel tank completely. Press purge bulb 6-7 times to remove remaining fuel from carburetor then drain the tank again. Close choke, start and run the engine until it stops due to lack of fuel.
- Allow engine to cool. Remove the spark plug lead from the spark plug. Remove the spark plug. Pour 7 cc (0.25 oz.) of fresh, clean, two-stroke engine oil into the cylinder through the spark plug hole.
- 8. Pull the recoil starter handle 2-3 times to distribute the oil inside the engine.
- 9. Observe the piston location through the spark plug hole. Pull the recoil handle slowly until the piston reaches the top of its travel and leave it there.
- 10. Install the spark plug. Connect the spark plug lead to the spark plug.

### **SPECIFICATIONS**

For units with the following serial numbers: U11915001001 - U11915999999 U58915001001 - U58915999999

| MODEL                               | T235   |
|-------------------------------------|--|
| Length without cutter head          | 1,782 mm (70.2 in.)  |
| Width                               | 285 mm (11.2 in.)  |
| Height                              | 337 mm (13.3 in.)  |
| Weight (dry) without cutter<br>head | 4.8 kg (10.6 lb.)  |
| Engine Type                         | Air cooled, two-stroke, single cylinder gasoline engine  |
| Bore                                | 32.2 mm (1.27 in.)   |
| Stroke                              | 26 mm (1.02 in.)   |
| Displacement                        | 21.2 cc (1.29 in. <sup>3</sup> )   |
| Exhaust                             | Spark arrestor muffler or spark arrestor muffler with catalyst   |
| Carburetor                          | Diaphragm with purge pump  |
| Ignition System                     | Flywheel magneto, capacitor discharge ignition type  |
| Spark Plug                          | NGKBPMR8Y - Gap 0.6 mm (0.026 in.)   |
| Fuel                                | Mixed (Gasoline and Two-stroke Oil)  |
| Fuel/Oil Ratio                      | 50:1   |
| Gasoline                            | Use 89 Octane unleaded. Do not use fuel containing methyl alcohol, more than 10% ethyl alcohol or 15% MTBE. Do not use alternative fuels such as E15 or E85. |
| Oil                                 | ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345-<br>FD, two-stroke, air-cooled engine oil.  |
| Fuel Tank Capacity                  | 420 mL (14.2 US fl. oz.)   |
| Starter System                      | Automatic Rewind Starter   |
| Clutch                              | Centrifugal Type   |
| Vibration Reduction<br>Systems      | Rubber cushion on engine mount. Rubber anti-<br>vibration grip on front and rear handles.  |
| Operating Rod                       | 25.0 mm diameter aluminum tube   |
| Drive Shaft                         | 7 mm (0.28 in.) shaft  |

| MODEL                             | T235  |
|-----------------------------------|---|
| Gear Case Ratio                   | 1.62 Reduction  |
| Rotating Direction                | Counterclockwise (viewed from top)  |
| Cutter Head                       | Semi-automatic nylon line head<br>(Speed Feed® 400)                       |
| Handle<br>Front<br>Rear           | D-loop type with rubber anti-vibration grip<br>Rubber anti-vibration grip |
| Idle Speed                        | 3,000 RPM   |
| Clutch Engagement Speed           | 4,300 RPM   |
| Wide Open Throttle Speed (W.O.T.) | 9,000 RPM   |

### **SPECIFICATIONS**

For units with the following serial numbers: U70715001001 - U70715999999

| MODEL                               | T235   |
|-------------------------------------|--|
| Length without cutter head          | 1,770 mm (69.6 in.)  |
| Width                               | 285 mm (11.2 in.)  |
| Height                              | 337 mm (13.3 in.)  |
| Weight (dry) without cutter<br>head | 4.9 kg (10.8 lb.)  |
| Engine Type                         | Air cooled, two-stroke, single cylinder gasoline engine        |
| Bore                                | 32.2 mm (1.27 in.)   |
| Stroke                              | 26 mm (1.02 in.)   |
| Displacement                        | 21.2 cc (1.29 in. <sup>3</sup> )                               |
| Exhaust                             | Spark arrestor muffler or spark arrestor muffler with catalyst |
| Carburetor                          | Diaphragm with purge pump                                      |
| Ignition System                     | Flywheel magneto, capacitor discharge ignition type            |
| Spark Plug                          | NGKBPMR8Y - Gap 0.6 mm (0.026 in.)                             |
| Fuel                                | Mixed (Gasoline and Two-stroke Oil)                            |
| Fuel/Oil Ratio                      | 50:1   |

shindaiwa

| MODEL                                | T235   |
|--------------------------------------|--|
| Gasoline                             | Use 89 Octane unleaded. Do not use fuel containing methyl alcohol, more than 10% ethyl alcohol or 15% MTBE. Do not use alternative fuels such as E15 or E85. |
| Oil                                  | ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345-<br>FD, two-stroke, air-cooled engine oil.  |
| Fuel Tank Capacity                   | 0.38 L (12.8 US fl. oz.)   |
| Starter System                       | Automatic Rewind Starter   |
| Clutch                               | Centrifugal Type   |
| Vibration Reduction<br>Systems       | Rubber cushion on engine mount. Rubber anti-<br>vibration grip on front and rear handles.  |
| Operating Rod                        | 25.0 mm diameter aluminum tube   |
| Drive Shaft                          | 7 mm (0.28 in.) shaft  |
| Gear Case Ratio                      | 1.62 Reduction   |
| Rotating Direction                   | Counterclockwise (viewed from top)   |
| Cutter Head                          | Semi-automatic nylon line head<br>(Speed Feed® 400)  |
| Handle<br>Front<br>Rear              | D-loop type with rubber anti-vibration grip<br>Rubber anti-vibration grip  |
| Idle Speed                           | 3,000 RPM  |
| Clutch Engagement Speed              | 4,300 RPM  |
| Wide Open Throttle Speed<br>(W.O.T.) | 9,000 RPM  |

### **PRODUCT REGISTRATION**

#### Thank you for choosing Shindaiwa Power Equipment

Please go to http://www.shindaiwa-usa.com to register your new product on-line. It's **FAST** and **EASY**! NOTE: your information will never be sold or misused by ECHO Incorporated. Registering your purchase enables us to contact you in the unlikely event of a service update or product recall, and verifies your ownership for warranty consideration.

If you do not have access to the Internet, you can complete the form below and mail to:

### ECHO Incorporated, Product Registration, PO Box 1139, Lake Zurich, IL 60047.

| ONLINE OPTION: Register online and save a stampl You will alone un exponduct inplates and/or be sent new Shindawa product withormation and special offers. Simply 90 floatawa product you will alone une to www.shindaiwa-usa.com OPCIÓN PC   Please Print : Por Favor Enscriba Con Letra De Molde : En Lettre Carré S.N.P. Please Print : Por Favor Enscriba Con Letra De Molde : En Lettre Carré S.N.P.   Please Print : Por Favor Enscriba Con Letra De Molde : En Lettre Carré S.N.P. Prochaser's Name : Nombre del Comprador : Nom de l'acheteur   Address : Dirección : Adresse State : Estado : Zip Code : Código P   City : Ciudad : Ville State : Estado : Zip Code : Código P   Phone Number : Dirección De Correo Electrónico : Courrier Électronique Date de l'achat      | ampi You will ahor<br>w Shindatwa<br>w Shindatwa<br>w Shindatwa<br>pool<br>pi go lo: ma<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto<br>ducto | are a stamply You will<br>sent new Shindalwa<br>seri new Shindalwa<br>as Simply go to:<br>an Simply go | en la pagina web y<br>exuellaziones del<br>confider<br>si Simplemente visite.<br>Simplemente visite.<br>Simplemente visite.<br>Simplemente visite.<br>Confider<br>Primary use of tool: Professionnel<br>Usage principal : Professionnel<br>Do you wish to receive periodic Shi<br>detornios sobre el producto Shinda<br>Souhaliez-vous recevoir périodicy<br>Shindawa et les offres spéciales f<br>Did you visit the Shindaiwa websit<br>Tosa "Non "Visito used la pagina web Shindai<br>Visito used la pagina web Shindai<br>Verz-vous visité le site d'Shindaiw<br>What factor(s) most influenced you<br>What factor(s) most influenced you<br>Performance | ni a pagina weby<br>the pagina weby<br>the second second second second ans year<br>the second second second second ans year<br>the second second second second second second<br>the second second second second second second second<br>the second second second second second second second<br>the second seco | In pagina weby<br>reliable in pagina weby<br>in controls Nuclear: E-innegister injone el agromer un<br>simplemente visite: Unclear produit Sindawa<br>Simplemente visite:   Simplemente visite: Simplement visite: Intermetion in the<br>simplemente visite:   Simplemente visite: Simplement visite: Intermetion in the<br>simplemente visite:   Simplemente visite: Simplement visite: Intermetion<br>simplemente visite:   Simplemente visite: Intermation provided will not be shared or sold<br>confidential:   Primary use of tool: Professional Homanowner   Do you wish to receive periodic Shindawa<br>offers by email? Dise a used recibir information and special<br>for solve and special<br>offers by email?   Do you wish to receive periodic sy ofertas especiales por correo<br>offers by email? Dise a used recibir information and special<br>for solve and special<br>for solve and special<br>for solve and special<br>offers by email?   Do you visit the Shindawa<br>Apertonic solve end products? Dise<br>for solve and special<br>for solve and special<br>for you visit the Shindawa avel to encurrer eflectronique ?   Di you visit the Shindawa avel to encurer vote product?   Di you visit the Shindawa avel to encurer vote product?   Di you visit the Shindawa avel to encurer vote product?   Mant factor(s) most influenced your purchase?   Di you visit the Shindawa avel to procurer vote product?   Mant factor(s) most influenced your purchase?   Di on   Di on   Di on |
|---|--|--|---|---|---|
| Where Purchased : Nombre del Almacén donde fue Comprado : Lieu d'achat<br>Model Number : Numero del Modelo: No. de modéle Serial Number : Numero de Serie : No. de série<br>Registering your purchase enables us lo contact you in the unitedy event of a service update or product recal and vertifes your<br>Registering your purchase enables us lo contact you in the unitedy event of a service update or product recal and vertifes your<br>Competimente enables us contact you in the unitedy event of a service update or product recal and vertifes your<br>Competimente enables uns commerce advance product varia de andreador product recal and vertifes your<br>competimente enables uns commerce advance product varia la confiscion or product recal and vertifes your | fue Comprado : Li<br>odéle Serial Numi<br>Defie Serial Numi<br>permite seta en onte<br>permite seta en onte  | leu d'achat<br>ber : Numero de Serie : No. de série<br>Nee update or product recal and verifies your<br>acto oute dans evento<br>propeded en regoo updates vento   | Untrenouramity<br>Cuei faerouramity<br>Funcionamiento<br>antigorfamiliad<br>Cuel facteur (facteu<br>Penformance<br>Penformance<br>Chabilité<br>AmilFamille  | s en su corr<br>encia Anterior<br>influencé le<br>ience<br>Le   | arranty<br>istribuidor<br>alidad<br>arantía<br>archand<br>ualité<br>arantie   |
| aviso de tiempo de servicio o la revocación del prodi<br>strement de votre achat nous permettra de vous contr   | ducto y verificación d   | acto con ustev en caso de cuarquier version<br>le propiedad en caso de robo o pérdida :<br>probacione dos instructions   |   | :   |   |

shindaiwa

T235

U11915001001 - U11915999999 U58915001001 - U58915999999 U70715001001 - U70715999999

# **Shindaiwa**<sup>®</sup>

400 Oakwood Road Lake Zurich, IL 60047 www.shindaiwa-usa.com